


Residential Gateway User's Guide (RG2400)

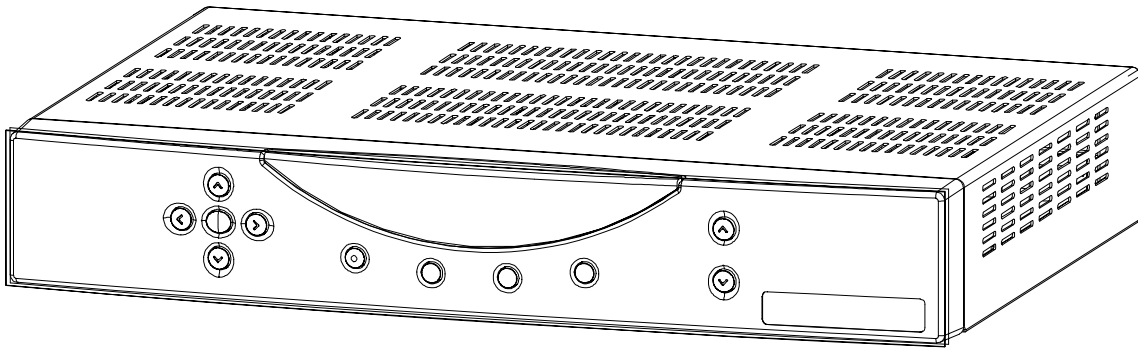

6085 State Farm Drive • Rohnert Park, CA 94928

MOTOROLA the Stylized M Logo and Next Level Communications are registered in the US Patent & Trademark Office.

Other trademarks are the property of their respective owners. All other products or company names are used for identification purposes only and may be trademarks of their respective owners.

Copyright © 2004 by Motorola Inc. / Next Level Communications. All rights reserved. Computer programs referred to in this documentation contain confidential and proprietary information of Motorola / Next Level Communications.

Information contained in this document is subject to change without notice. Motorola / Next Level Communications assumes no responsibility for any errors that may appear in this document, nor liability for any damages arising out of the use of this document. No part of this document may be reproduced in any form by electronic or mechanical means (including photocopying, recording, or information storage and retrieval) without permission in writing from Motorola / Next Level Communications.

519725-001-00

September 2004.

TABLE OF CONTENTS

IMPORTANT SAFEGUARDS	5
Safety	6
Repairs	6
INTRODUCTION	7
About This Manual	7
What Your Network Service Provider Does	8
Optional Gateway Features	9
GETTING STARTED	11
Using Your RG2400	11
AC Outlet	13
Using Your Remote Control	13
Caller ID/Message Waiting	17
Using Pay-Per-View	18
Access Parental Control	18
Recording Your Favorite Programs	19
Cancelling Your Recording	19
Programming Your VCR Code (Optional)	20
ADVANCED USE	21
Changing or Programming Settings	21
Determine the remote control Operating Mode (SRC-300A only)	21
Set the remote control Operating Mode (SRC-300A only)	21
Determining the Gateway ID	22
Setting the Gateway ID	24
Determining the Remote Control ID	24
Setting the Remote Control ID	25
Programming the TV Code	25
Programming the TV Code Using Code Search Method	26
Verifying the TV Codes	27
Verifying and Setting Other Features	27
Accessing the TV Setup Menu	27
Verifying the TV (RF) Setting	28
Secondary Audio: Specifying A Preferred Language	29
Display Language	29
EADS (Emergency Alert Device Support)	29
CONNECTING YOUR PC TO THE INTERNET.....	31
Ethernet Connections	31
CONFIGURATION EXAMPLES	33
TV/VCR/Audio Connections	34
TROUBLESHOOTING	39
Possible Causes and Solutions	39
Contacting Your Network Service Provider for Help	40
TV AND VCR CODES.....	41
TV Codes - SRC 300	41
TV Codes - SRC-200	43
VCR Codes	44
SPECIFICATIONS	47
Certifications	47
FCC Statement of Compliance	48
INDEX.....	49

IMPORTANT SAFEGUARDS

READ INSTRUCTIONS – All the safety and operating instructions should be read before the product is operated.

RETAIN INSTRUCTIONS – The safety and operating instructions should be retained for future reference.

HEED WARNINGS – All warnings on the product and in the operating instructions should be adhered to.

CLEANING – Do not use liquid or aerosol cleaners to dust this product. Use a cloth lightly dampened with water for cleaning.

ATTACHMENTS – Do not use attachments that are not recommended as they may cause a hazard.

WARNING – To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious personal injury and serious damage to the product. Use only with a cart, stand or table recommended by the manufacturer or sold with the product. Follow the manufacturer's instructions when installing the product and use mounting accessories recommended by the manufacturer. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.

VENTILATION – Slots and openings in the product housing are provided for ventilation, to ensure reliable operation of the product, and to protect it from overheating the following should be observed:

- Openings should never be blocked by placing the product on a bed, sofa, rug, or similar surface.
- Do not stack other equipment on top of the RG2400.
- Maintain at least 2 inches of free space above the RG2400.
- Do not install near heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- **POWER SOURCES** – This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your local power company. For equipment intended to operate from battery power or other sources, refer to the operating instructions.
- **GROUND OR POLARIZATION** – This product may be equipped with a polarized alternating current line plug (a plug having one blade larger than the other). This plug will fit into the power outlet in only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit into the outlet, contact an electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- **POWER CORD PROTECTION** – Power cords should be routed so they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where the plugs exit from the product.
- **POWER SOCKET OUTLET** – Use a power socket outlet located near the equipment that is easily accessible.
- **LIGHTNING** – For added protection for this product during a lightning storm, or when it is left unattended, unplug it from the wall outlet. This will prevent damage to the video product due to lightning and power line surges.
- **OVERLOADING** – Do not overload wall outlets and extension cords, as this can result in a risk of fire or electrical shock.

- **OBJECT AND LIQUID ENTRY** – Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electrical shock. Never spill liquid of any kind on the product.
- **SERVICING** – Do not attempt to service this equipment yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- **DAMAGE REQUIRING SERVICE** – Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
 - When the power supply cord or plug is damaged
 - If liquid has been spilled or objects have fallen into the equipment
 - If the product does not operate normally by following the operating instructions
 - If the product has been dropped or the housing has been damaged
 - When the product exhibits a distinct change in performance
- **SAFETY CHECK** – Upon completion of any service or repairs to the product, ask the service technician to perform safety checks to determine that the product is operating properly.




SAFETY

This section reviews important safety concepts for working with the optical and electrical equipment covered in this guide.

SAFETY ADVISORIES AND LABELS

Important warning notices, if any, are located on the back of the RG2400 about safety to people and equipment. Failure to observe these rules and similar danger, caution, or warning notices can result in serious personal injury, service interruption, and equipment damage.


SYMBOLS

Symbol	Meaning
	Indicates "See instructions".
	Indicates "Double Insulation".
	Indicates "Use only with the cart, stand, bracket, tripod, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over".

REPAIRS

If you find the unit in need of repair, contact your network service provider for repair or replacement. **WARNING! Disconnect unit before servicing.**

INTRODUCTION

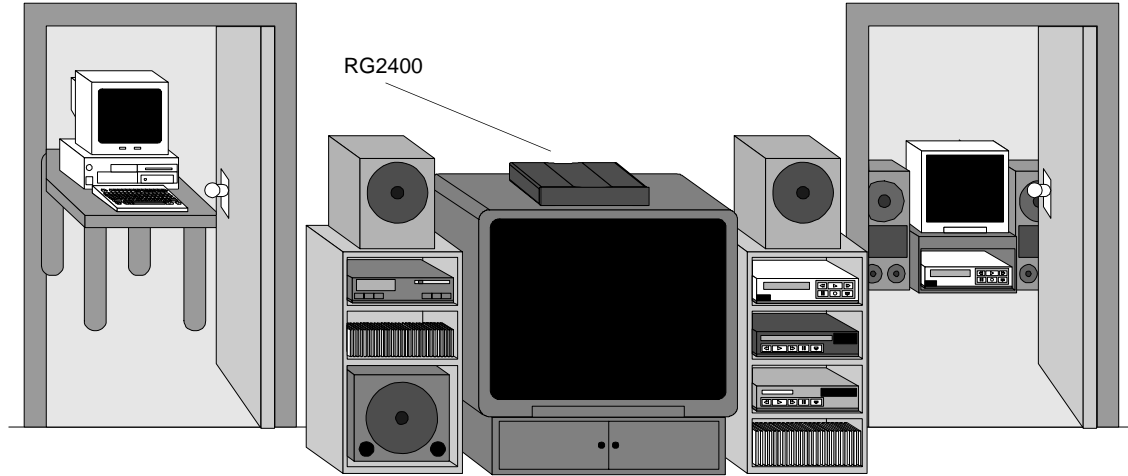

Beneath the compact and stylish exterior of the RG2400 is a powerful media delivery system. The RG2400 is different from other video boxes that you may have encountered. Some competitor boxes are designed to deliver one video/audio channel to a single TV and/or VCR device. In contrast, the compact RG2400 delivers the functionality of two or three high-quality digital video boxes in a single package. Depending on the model you have, the RG2400 can deliver separate xDSL video services to up to three TVs at the same time. It also provides a high-speed xDSL modem for Internet access and telephony capabilities, such as Caller ID and Message Waiting display.

ABOUT THIS MANUAL

The information in this manual is applicable to ADSL or VDSL versions of the [Residential Gateway RG2400](#). The term xDSL is a generic term, used in this manual, to refer to both ADSL and VDSL technologies.

GETTING STARTED on page 11 contains the information you use most frequently and helps you understand how the RG2400 works after your NSP (network service provider) has connected and programmed its functions. It also describes how to use the RG2400 remote control to access and control the basic features of the RG2400.

ADVANCED USE on page 21 provides more technical information about the RG2400 and gives instructions about how to set up and program your system.

CONFIGURATION EXAMPLES on page 33 illustrates possible component wiring configurations of the RG in your system to aid you if you want to move your equipment or connect additional equipment such as an entertainment center or a new VCR.

CONNECTING YOUR PC TO THE INTERNET on page 31 briefly explains connecting your PC to the Internet. Illustrations show configurations for setting up a LAN (local area network) in your home.

TROUBLESHOOTING on page 39 provides help for problem resolution.

WHAT YOUR NETWORK SERVICE PROVIDER DOES

The NSP (network service provider) is the company that installs your telephone and data services, as well as possibly providing Internet service. Some telephone companies, however, use an ISP (Internet service provider) company to offer Internet service to their customers.

During the initial installation your NSP does the following:

- Installs the RG2400 and connects it to your home entertainment system.
- Sets all features and services to which you have subscribed including:
 - Wiring additional rooms with coaxial cable for secondary TVs.
 - Connecting secondary TVs (TV2 and TV3) to the network and to any splitters and RAP(s) (remote antenna package) that are required.
- Connects and configures your PC(s) to access the Internet.
- Ensures that all the remote controls in your home used with your RG2400 are the correct model.
- Installs the batteries in your remote control.
- Programs your remote control(s) to operate a specific TV.
- Provides labels for your remote controls to let you label one remote for each TV.
- Writes the remote control IDs in the space provided (see form below).

ABOUT RF CHANNELS

Your NSP sets your TV to operate on a specific RF channel. This setting allows you to receive video and audio broadcast services.

Programming the TV to an RF channel is similar to setting a TV to a specific channel, such as channel 3, in order to view movies played on your VCR. After the RF channel has been set, it is recommended that you do not change it, as you will no longer be able to receive programming unless you retune your TV to a new RF channel.

Once your TV is tuned to the specified RF channel, the RG2400 and your remote allow you to surf through the channel line-up and tune to any program from any TV viewing location. The table below demonstrates how the TV outputs and the RF channels work together to deliver video and audio programming.

TV	OUTPUT Ports	RF Channel ¹
TV1	NETWORK IN/TV OUT	3 or 4
TV2	and/or	7, 8, 9 or 10 ²
TV3 (VDSL only)	TV OUT	11 ² , 12 or 13

1. These RF channels are representative only. Actual RF channels used will vary according to location and will be determined by your NSP.

2. To avoid interference, do not use channels 10 and 11 simultaneously.

WRITE YOUR REMOTE CONTROL AND OTHER IDs HERE

You may wish to label each of your remote controls so you can easily identify which TV they have each been programmed to control. Ask your service provider for labels if they have not already been provided for you.

Write your remote control ID here:

TV1 _____ TV2 _____ TV3 _____

Write your TV code here:

TV1 _____ TV2 _____ TV3 _____

Write your Gateway ID here:

OPTIONAL GATEWAY FEATURES

CLOSED CAPTIONING

The RG2400 supports closed captioning capability. Refer to your TV User's Guide for instructions on how to use closed captioning.


GETTING STARTED

This section contains basic information needed to get you started using your new RG2400 right away. This information is covered in the following subsections:

- “Using Your RG2400” on page 11
- “Using Your Remote Control” on page 13
- “Changing Channels” on page 15
- “Controlling TV Volume” on page 15
- “Setting Up Channel Order and Your Favorite Channel List” on page 16
- “Caller ID/Message Waiting” on page 17
- “Using Pay-Per-View” on page 18
- “Access Parental Control” on page 18
- “Recording Your Favorite Programs” on page 19
- “Cancelling Your Recording” on page 19
- “Programming Your VCR Code (Optional)” on page 20
- “Replacing Remote Control Batteries” on page 13

USING YOUR RG2400


The figure below shows the buttons you need to be familiar with when using the RG2400. See the following table for descriptions of their functions.

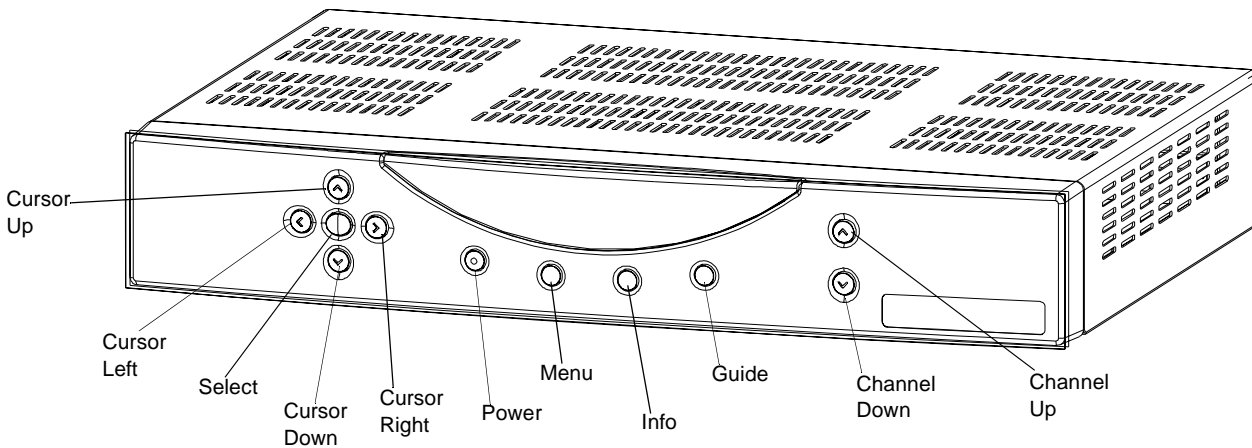

The following table describes the buttons on the front of the RG2400. These buttons operate at the primary viewing location, which is TV1.

Button Name	Button function
Cursor Up	Moves the cursor up, one position at a time, within the current application.
Cursor Left	Moves the cursor left, one position at a time, within the current application.
Select	Selects the current item.
Cursor Down	Moves the cursor down, one position at a time, within the current application.
Cursor Right	Moves the cursor right, one position at a time, within the current application.

Button Name	Button function
Power	<ul style="list-style-type: none"> ■ Exits any active application. ■ Initiates power off sequence (either shows message/time display or power off channel depending on local settings). ■ Toggles Power LED and the AC outlet (turns both LED and AC outlet on and off). ■ Reboots (restarts) the RG2400 if pressed and held for 5 seconds or more.
Menu	Displays the Gateway Menu.
Info	Displays information about the currently selected channel.
Guide	Displays the program guide.
Channel Up	Increases the channel number.
Channel Down	Decreases the channel number.

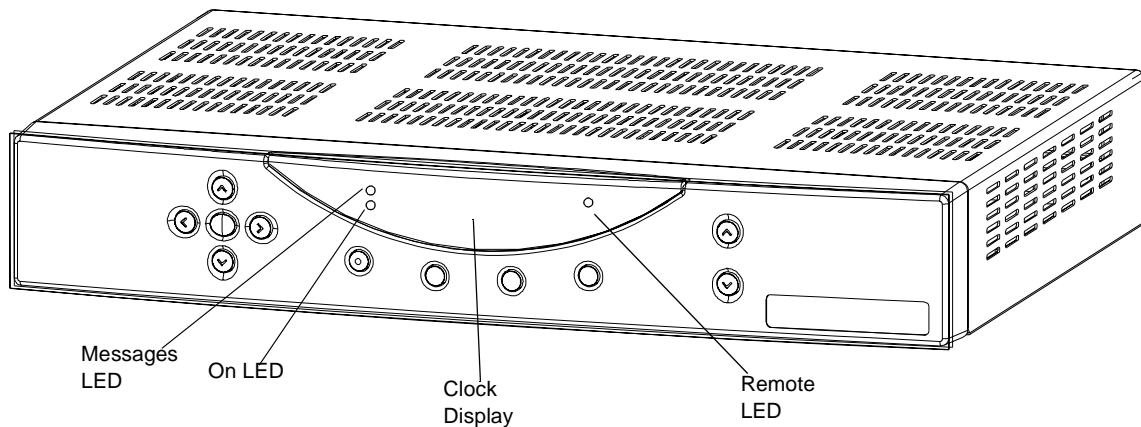

The following table describes the LEDs on the front of the RG2400. These LEDs operate at the primary viewing location, which is TV1

RG2400 LED	LED Function
Messages LED	<p>A lit LED indicates one or more voice mail messages are present.</p> <p>When the LED is off, there are no voice messages present.</p>
Power (On) LED	<p>Lit when the AC outlet is switched on.</p> <p>Blinks off and on during the startup process.</p>
Remote LED	<p>Briefly lit when a remote control key is pressed (using the remote tuned to the first stream or primary TV). Indicates that remote keystroke activity is being seen by the settop.</p>
Clock Display (4-character display)	<ul style="list-style-type: none"> ■ Under normal operation, this display shows the current time. ■ When the user changes channels, this display will display the channel selected for a few seconds, and then return to presenting the current time. ■ Hardware Signoff - If the xDSL connection is lost or broken, the two characters on the left display a circling pattern, the two on the right will not be lit. ■ Software Signoff - If the xDSL connection is established but the system is unable to establish software signon, the two characters on the left display a circling pattern and the two characters on the right also display a similar circling pattern.

AC OUTLET

The RG2400 has an AC outlet on the rear of the unit. Other devices can be plugged into this outlet. The outlet is on when the RG2400 is powered up. If you find that the outlet is off when the RG2400 is on, any press on the remote control turns the AC outlet back on.

USING YOUR REMOTE CONTROL

The remote control allows you to control TV viewing from anywhere in your home. Your NSP (or yourself) can program it to operate your TV as well as your RG2400. The remote control operates by sending either IR (infrared) or UHF (ultra-high frequency) signals to the RG2400. Your Network Service Provider programs your remote to operate in the most appropriate mode for your home.

If your remote control is programmed for IR mode, it requires a direct line-of-sight in order to function. In other words, you need to point an IR remote directly to the television or the RG2400. You can only use an IR remote to operate a TV that is located in the same room as the RG2400. If your primary TV (TV1) located in a different room than the RG2400, the remote must be programmed to use UHF mode.

Remote controls that control secondary TVs (TV2, TV3), are also programmed to operate in UHF mode.


REPLACING REMOTE CONTROL BATTERIES

1. Remove the battery compartment cover by holding the remote control with its back facing you, then pressing the battery cover at the thumb depression and sliding it off.
2. Install two 1.5V AA alkaline batteries, aligning positive and negative terminals according to the diagrams in the battery compartment.
3. Replace the remote control battery cover, snapping it into place.
4. Press the Power button on the remote control.

REMOTE CONTROL MODELS

Two models of remote control can be used with the RG2400. They are the SRC-300A and the SRC-200. To tell which model you have, consult the label on the back of the remote control. The SRC-300A and the SRC-200 differ slightly. Both are described in the following sections.

SRC-300A REMOTE CONTROL KEYS

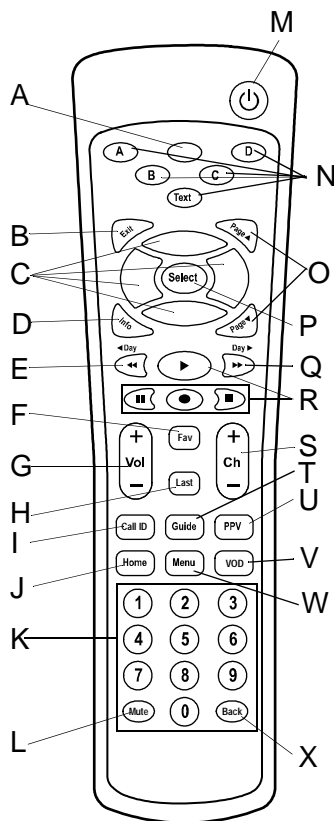


- A. **LED**: Lights when any button on the remote is pressed. Also, when pressed and held starts programming sequences.
- B. **Exit**: Exits the current function.
- C. **Directionals**: Move cursor in program guide and menus.
- D. **Info**: Displays current channel and program guide and menus.
- E. **Day back**: Moves program guide back 24 hours.
- F. **Fav**: Scans through favorite channels.
- G. **Vol**: Adjusts TV volume.
- H. **Last**: Tunes to last channel.
- I. **Call ID**: Opens caller ID screen.
- J. **Home***: Displays web browser, if provided.
- K. **Number pad**: selects channels.
- L. **Mute**: Mutes and unmutes TV sound.
- M. **Power**: Powers TV on/off and tunes to default channel.
- N. **A, B, C, D** and **Text***: Reserved for Teletext functions.
- O. **Page up** and **down**: Pages up and down in program guide and menus.
- P. **Select**: Selects highlighted option.
- Q. **Day forward**: Moves program guide forward 24 hours.
- R. **Play***, **Record**, **Pause***, and **Stop***: Video on demand controls.
- S. **Ch**. Changes program channel.
- T. **Guide**: Displays interactive program guide.
- U. **PPV**: Displays pay per view menu.
- V. **VOD***: Launches VOD (video on demand) menu, if provided.
- W. **Menu**: Displays main menu.
- X. **Back***: In the browser, moves back to the previous screen.

* Key not available on simplified remotes.

SRC-200 REMOTE CONTROL KEYS

- A. **A**: Starts Remote ID programming sequence and VOD, if provided.
- B. **PPV**: Displays Pay Per View menu.
- C. **Call ID**: Opens Caller ID screen.
- D. **Exit**: Exits current menu and returns you to previous screen.
- E. **Directionals**: Arrows move cursor in program guide & menu screens.
- F. **Fav**: Scans through favorite channels.
- G. **Vol**: Adjusts TV volume.
- H. **Mute**: Mutes TV sound. When pressed and held, initiates TV code setup.
- I. **Number pad**: Selects channels.
- J. **Day back**: Moves program guide back 24 hours.
- K. **B**: Starts Gateway ID programming sequence & browser, if provided.
- L. **Power**: Powers TV on/off and tunes to default channel.
- M. **Menu**: Displays Main Menu.
- N. **Page up and down**: Pages up and down in program guide and menus.
- O. **Guide**: Displays interactive program guide.
- P. **Select**: Selects highlighted option.
- Q. **LastCh**: Tunes to last channel.
- R. **Info**: Displays current channel and program information.
- S. **Chan**: Changes program channel.
- T. **Day back**: Moves program guide forward 24 hours.

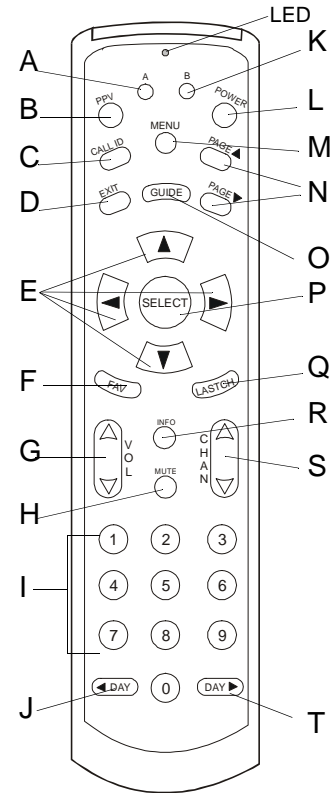

ACTIVATING THE RG2400

The RG2400 doesn't have an on/off button. However, if your NSP has activated the "One Touch Power" option, the RG2400 can be put into a power saving mode when you use the POWER button on the remote to turn the TV off. It is reactivated when the TV is turned on using the same button.

CHANGING CHANNELS

To change the channel using the remote control buttons do one of the following:

- Press up or down on the channel key (labeled CHAN or Ch).
- Enter the channel number on the number key pad and press Select.
- Enter the channel number on the number key pad and wait 5 seconds; the RG2400 will go to the channel entered.

To change the channel using the RG2400 front panel buttons:

- Press the up or down key on the front panel.

CONTROLLING TV VOLUME

To raise or lower the volume on your TV using your remote control, press up or down on the VOL key.

TO MUTE OR UNMUTE THE TV VOLUME USING YOUR REMOTE CONTROL

1. Press the MUTE key on the remote to mute your TV.
2. Press it again to unmute the TV.

SETTING UP CHANNEL ORDER AND YOUR FAVORITE CHANNEL LIST

You can use the remote control to select what channels will appear in your guide, set up your TV channel order or create a list of your favorite channels. Once your favorite channel list is set up, it can be accessed by pressing the FAV button on your remote control.

TO SELECT CHANNEL LIST

1. Press the MENU key on your remote control
The Main Menu screen of your interactive program guide is displayed.
2. Use the down (directional) key to highlight "Setup The Channels."
3. Press SELECT.
An options screen is displayed.
4. Use the down (directional) key to highlight "Select Channels."
5. Press SELECT.
6. Follow the instructions on the screen using your remote control buttons.
7. When you have completed your selection, press EXIT to return to the previous screen.

TO ARRANGE THE CHANNEL ORDER

1. Press MENU.
The Main Menu screen of your interactive program guide is displayed.
2. Use the up or down (directional) key to highlight "Setup The Channels."
3. Press SELECT.
An options screen is displayed.
4. Use the down (directional) key to highlight "Change Channel Order."
5. Press SELECT.
6. Follow the instructions in the interactive program guide.
7. When you have completed your selection, press EXIT to return to the previous screen.

TO CREATE A FAVORITE CHANNEL LIST

1. Press MENU.
The Main Menu screen of your interactive program guide is displayed.
2. Use the down (directional) key to highlight "Setup The Channels."
3. Press SELECT.
An options screen is displayed.
4. Use the down (directional) key to highlight "Favorite Channels."
5. Press SELECT.

6. Follow the instructions in the interactive program guide to select your favorite channels.
7. When you have completed your selection, press EXIT to return to the previous screen.

User Tip: Selecting channels to be included in the Favorite Channel List can also be performed in Pay-Per-View and when in the program guide menu.

Now, whenever you access the program guide or press the FAV key on your remote control, the channels will be listed in the order you selected.

CALLER ID/MESSAGE WAITING

If you have subscribed to Caller ID, Voice Mail or Call Waiting services with your NSP, these capabilities are enabled as soon as the RG2400 is connected to the network.

When an incoming call arrives, the message LED on the front of the RG2400 is illuminated and caller ID information appears in the upper left-hand corner of each of the TVs that is caller-ID enabled.

The information may include some or all of the following, depending on the services available to you in your area.

- The caller's name
- The caller's number
- The date of the call
- The time of call

You may also receive messages indicating the following conditions exist.

- The caller is out of the area
- The caller ID information is unavailable


Some of the caller information received is marked as private.

All caller ID information is added to the Call Log. The RG2400 maintains a log of the last 50 calls. Information that is unavailable appears in the Call Log as unavailable or private. The log includes:

- The caller's name
- The caller's phone number
- The date
- The time of the call

TO VIEW THE CALL LOG

1. Press the CALL ID key on your remote control.
The Caller ID Log is displayed. New calls appear with:
 - An asterisk (*)
 - Highlighted text

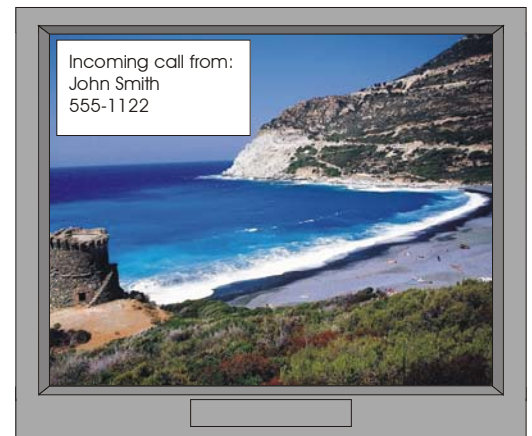

User Tip: Make changes to your Caller ID and Voice Mail setups by pressing the MENU button and then selecting “Telephone Services”.

2. Use the up or down (directional) keys to scroll through the list of calls in the Call Log.
3. Or, use the PAGE UP or PAGE DOWN buttons to scroll through pages of calls.
4. Press EXIT when you have finished.

USING PAY-PER-VIEW

The RG2400 allows you purchase and cancel Pay-Per-View programs, create passwords that control the ability to purchase programs.

ORDER OR CANCEL PAY PER VIEW PROGRAMS USING YOUR REMOTE CONTROL

1. Press the PPV key on your remote control.
The interactive pay-per-view program guide is displayed.
2. Use your remote control and follow the instructions in the interactive program guide.

ACCESS PARENTAL CONTROL

The RG2400 allows you to use parental discretion about the TV programs or movies you want your children viewing. This “parental lock” is easily set up and removed using your remote control. You can control access to programs of your choice in several ways:

- Lock by channel
- Lock by rating and content
- Lock by time

The RG2400 also allows you the option to create passwords that control the ability to purchase programs and access parental locks.

1. Press MENU on your remote control.
The Main Menu screen is displayed.
2. Use the down (directional) key on your remote to highlight “Parental Control.”
3. Press SELECT.
An options menu is displayed. The options include:
 - Parental Control Locks
 - Setup Passwords
4. Highlight the action you want to perform.
5. Press SELECT.
6. Follow the instructions on your interactive program guide.

Important! If you have forgotten your password and are unable to access pay-per-view or the parental controls, contact your NSP and have them reset your password.

RECORDING YOUR FAVORITE PROGRAMS

User Tip: When you are connecting your RG2400 to a VCR that has more than one AV input, be sure to plug into the default, or primary input, which could be called AV-1 or L-1.

Make sure that your NSP has connected the VCR to the RG2400. For examples of VCR connections See “TV/VCR/Audio Connections” on page 34.

1. Turn on your VCR.
2. Load the tape you want to record on.
3. Press GUIDE on your remote control.
4. Highlight the channel you wish to record.
5. Press SELECT.
6. Start the record function on your VCR. (Consult your VCR user’s manual for the correct procedure.)

User Tip: If you don’t want caller ID or other messages to appear in a program you are recording, turn the caller ID feature off. See User Tip on [page 18](#).

SETTING UP YOUR RG2400 TO START YOUR VCR (OPTIONAL)

Note: The IR Blaster (see illustrations on [page 38](#)) must be installed and your VCR(s) must be programmed into the RG2400 by your NSP before the RG2400 can be programmed to record your favorite program. If the IR Blaster hasn’t been installed, contact your NSP. Not all NSPs support use of the IR Blaster.

To setup the RG2400:

1. Press GUIDE on your remote control.
2. Use the up or down key to highlight the program you wish to record.
3. Press SELECT. An options menu is displayed.
4. Follow the interactive program guide instructions to set up the times to you want start and stop the recording.

User Tip: The record set up can be accessed from the Pay-Per-View menu so your pay-per-view selection can be recorded at the time you choose.

When your programming is complete, the following occurs.

- Your VCR begins recording.
- The record LED on the front panel of RG2400 turns on.

Note: You cannot change channels while the recording is in progress.

CANCELLING YOUR RECORDING

If you want to cancel a recording in progress:

1. Press SELECT on your remote control.
2. Use the right key to highlight “Cancel.”
3. Press SELECT. Your recording will be canceled.

PROGRAMMING YOUR VCR CODE (OPTIONAL)

Note: Not all NSPs support VCR codes.

1. Turn on VCR.
2. Put a recordable tape into the VCR.
3. Press Menu on the remote control.
The Main Menu is displayed.
4. Use the down (directional) key to highlight "Setup VCR."
5. Press SELECT.
An options menu is displayed.
6. If you know your VCR brand and code, highlight "Quick VCR Setup." See ["VCR Codes" on page 44](#) for a list of compatible VCRs.
7. Press SELECT.
An interactive action menu is displayed.
8. Follow the instructions in the menu.
9. If you don't know your VCR code, highlight "Complete VCR Setup."
10. Press SELECT.
An interactive action menu is displayed.
11. Follow the instructions on the menu.

ADVANCED USE

You will need the information in this section if you want to change the default settings that were set up by your NSP or reprogram your remote control because it is not working correctly.

Note: Your NSP programs your RG2400 and remote control when your system is first connected. The NSP also programs the same Gateway ID (this is the ID of your RG2400) into all the remote controls in your home. If there is more than one RG2400 in your home, your NSP programs the Gateway ID into each remote control that communicates with a specific RG2400.

CHANGING OR PROGRAMMING SETTINGS

By using the remote control, the RG2400 front-panel buttons, and on-screen menus, you can perform the following tasks.

- Determine the remote control Operating Mode
- Set the remote control Operating Mode
- Determine the Gateway ID
- Set the Gateway ID
- Determine the Remote Control ID
- Set the Remote Control ID
- Program TV Code
- Verify the TV RF channel
- Set the Display Language
- Set up Secondary Audio
- Set the EADS (Emergency Alert Device Support) display

DETERMINE THE REMOTE CONTROL OPERATING MODE (SRC-300A ONLY)

1. Press the LED key for three seconds until the LED flashes.
2. Press the INFO key. The LED stops blinking at this point and stays on solid.
3. Press and release the D key. When the D key is released, the LED immediately turns off.
4. Watch the LED.

The Operating Mode is indicated by a blink sequence. A short burst of flickering blinks indicates a '0' (SRC-200 Compatibility Mode) while a single blink indicates a '1' (SRC-300A Native Mode.) There is a 1-second pause before the LED turns on.

Once the LED sequence has completed, the SRC-300A returns to normal mode operation.

SET THE REMOTE CONTROL OPERATING MODE (SRC-300A ONLY)

The SRC-300A remote control operates older RG models as well as newer models. To allow for this, the remote can be set to operate in either SRC-200 Compatibility Mode or SRC-300A Native Mode. When in SRC-200 Compatibility Mode, the SRC-300A transmits IR/UHF messages that use the same format as the SRC-200 remote control (messages are 16-bits in length.) When in SRC-300A Native Mode, the SRC-300A transmits IR/UHF messages using the 18-bit message format. The default operating mode is SRC-200 Compatibility mode.

To program the operating mode:

1. Press and hold the LED key until it starts to blink.

If an invalid code is entered or a 20 second lapse in button presses occurs, the LED will turn off and the remote control will return to normal operation. You will need to begin the procedure from step 1.

2. Press the REC key. The LED stops blinking and stays solid.
3. Press and release the D key.
The LED temporarily turns off. Releasing the key causes the LED to light up again.
4. Press 0 to select SRC-200 compatibility mode or 1 to select SRC-300A native mode.
The new Operating Mode is then stored in the device.


Important! If the Operating Mode had been 1 (SRC-300A Native Mode) and is now set to zero (SRC-200 Compatibility Mode), then the Gateway ID is reset to zero and also stored in the device.

Once changes have been made, the remote control resumes normal operation. If the value entered was not valid (a keypress other than 0 or 1,) the LED indicates the error by turning off immediately and the remote returns to normal operation. (All values in the device remain unchanged.)

DETERMINING THE GATEWAY ID


Check, "[Write Your Remote Control and Other IDs Here](#)" on page 9. Your NSP may have already recorded the Gateway's ID on this page or on the back of the remote. If the ID has not been recorded, perform the following steps.

1. Press the MENU button on the front panel of the RG2400. (See "[Using Your RG2400](#)" on page 11 for an illustration and description of this button and other buttons on the RG2400s.)
The Gateway Menu screen will be displayed on your TV.

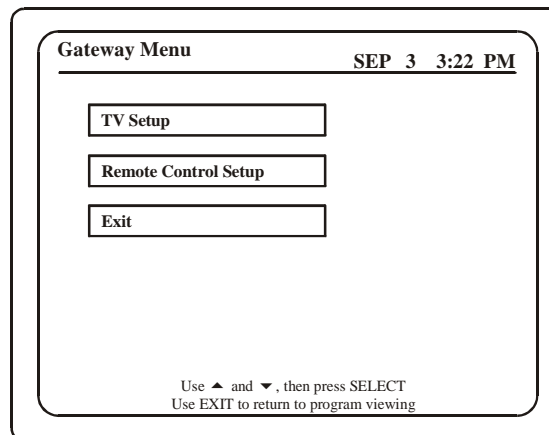


2. Use the down key on your remote control to move down to Remote Control Setup.
3. Press SELECT on your RG2400 or your remote control.

The Remote Control Setup screen will be displayed.

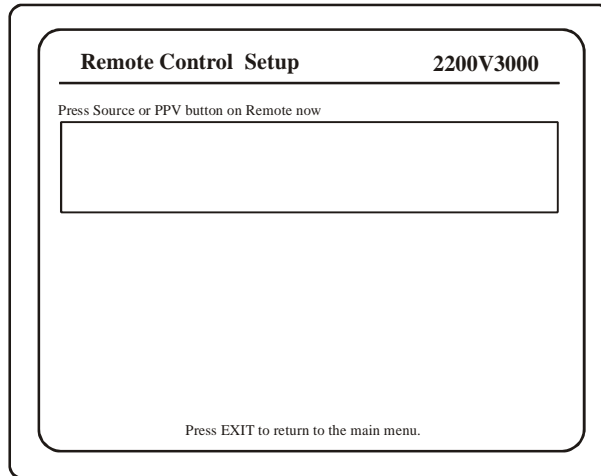

4. Press PPV on your remote control.

The screen lists the ID for the remote, identifies which TV this remote controls, and shows the Gateway ID.

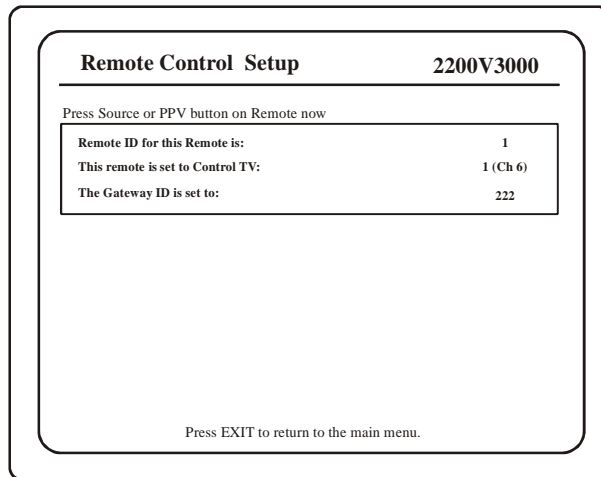

If the Gateway ID programmed into your remote control does not match the Gateway ID of the RG2400, the system prompts you to reset the Gateway ID.

For future reference, write down the Gateway ID number displayed in "[Write Your Remote Control and Other IDs Here](#)" on page 9.

5. Press EXIT twice on your remote to exit the Remote Control Setup and Gateway Menus.

SETTING THE GATEWAY ID

Depending upon the model of the remote control, instructions are as follows.

SRC-300A	SRC-200
<ol style="list-style-type: none"> 1. Press the LED key and hold it down until the LED flashes rapidly. 2. Press the REC key. The LED stops blinking at this point and stays on solid. 3. Press the B key. The remote is now in programming mode. You can set the GATEWAY ID. 4. Enter the 3-digit code assigned to your RG2400. The valid range is 004 - 999 for SRC-300As in native mode. For SRC-300As in SRC-200 Compatibility mode, the range is 004 - 255. Enter a number with 3-digits, even if it contains leading zeroes. Examples of valid values are: 009, 012, 354, or 988. 	<ol style="list-style-type: none"> 1. Press the B key and hold it down until the LED at the top of the remote flashes rapidly. 2. Release the B key. 3. Enter the following three key sequence: 7-8-9. The remote is now in programming mode. You can set the GATEWAY ID. 4. Enter the 3-digit code assigned to your RG2400. The valid range is 004 - 255. You must enter a number with 3-digits, even if it contains leading zeroes. Examples of valid values are: 009, 012, 124, or 255.

If you entered the Gateway ID correctly, the LED blinks several times. If the value was not entered successfully, the LED goes off and the remote control returns to normal operation. Repeat the steps above to try again. See ["Determining the Gateway ID" on page 22](#) to verify the Gateway ID.

DETERMINING THE REMOTE CONTROL ID

Depending upon the model of the remote control, instructions are as follows.

SRC-300A	SRC-200
<ol style="list-style-type: none"> 1. Press the LED key for 3 seconds until the LED flashes. 2. Press the INFO key. The LED stops blinking at this point and stays on solid. 3. Press the A key and watch the LED. 	<ol style="list-style-type: none"> 1. Press the A button and hold it down until the LED at the top of the remote flashes rapidly. 2. Press the FAV button and watch the LED.

Following are the sequences of flashing that indicate how your remote control ID is programmed.

- A short burst of flickering indicates a 0 (zero). A number of longer, steady blinks indicates a non-zero digit, such as the following.
- <pause> <long blink> <long blink> <long blink> indicates a "3."
- After blinking, the remote returns to normal operation.

Number of flashes	Remote Control ID	Mode
Rapid flickering	For TV1, which is in the same room as your RG2400	IR (Infra Red)
1	Remote TV1: Primary TV is in a different room than the RG2400.	UHF (ultra high frequency)
2	Remote TV2.	UHF
3	Remote TV3 (3-stream models only)	UHF

SETTING THE REMOTE CONTROL ID

Your NSP uses the following table when programming your remote control ID to work with each TV in your household. You may use it, too.

Remote Control ID	Operates TV	Mode
0	Local TV1--TV in same room as RG. Remote is set to operate in IR mode.	IR
1	Remote TV1--TV in a different room than the RG.	UHF
2	TV2 (remote TV).	UHF
3	TV3 (3-stream models only).	UHF

To program the remote control ID:

SRC-300A	SRC-200
<ol style="list-style-type: none"> 1. Press the LED key and hold it down until the LED flashes rapidly. 2. Press the REC key. The LED stops blinking at this point and stays on solid. 3. Press the A key. The remote is now in programming mode. 4. Enter the single-digit remote control ID from the table on page 25. 	<ol style="list-style-type: none"> 1. Press and continue to hold the A button until the LED at the top of the remote flashes rapidly. 2. Enter the following three-digit sequence: 7-8-9. The remote is now in programming mode. 3. Enter the single-digit remote control ID from the table on page 25.

Note: Valid single-digit codes are 0, 1, 2 (and 3, with 3-stream models).

If you entered an invalid sequence or a 20-second lapse in button presses occurs, the LED turns off and the remote control returns to standard operation.

If you correctly entered the single-digit code, the LED flashes on and off and then remains off.

Once you have set the remote control ID, write 0, 1, 2, or 3 on labels and place these labels on the TV and the remote to help you identify the TV and the remote to which it is assigned. Your Network Service Provider may have already done this.

Repeat this procedure for each remote control.

PROGRAMMING THE TV CODE

Your Network Service Provider programs each remote control to work with one TV by way of a TV code. The TV Code is a specific code for each brand and model of TV. When a TV code is set, the remote control is ready to operate the TV. The TV codes can be programmed manually, or they can be scanned. Each of the methods is described below.

Follow the steps below to program the TV code when you already know the three-digit code. (For a list of codes, see ["TV and VCR Codes" on page 41.](#))

SRC-300A	SRC-200
<ol style="list-style-type: none"> 1. Press the LED key and hold it down until the LED flashes rapidly. 2. Press the REC key. The LED stops blinking at this point and stays on solid. 3. Press and release the C key. The remote is now in programming mode. 4. Enter the three-digit code that corresponds to the brand name of the TV. See "TV Codes - SRC 300" on page 41. 	<ol style="list-style-type: none"> 1. Press the MUTE button and hold it down until the LED at the top of the remote control flashes rapidly. 2. While the LED button is flashing, enter the three digit code that corresponds to the brand name of the TV. See "TV Codes - SRC-200" on page 43.

If the code is valid, the LED will flash on and off three times and then remain off.

If an invalid code is entered or a 20 second lapse in button presses occurs, the LED will turn off and the remote control will return to normal operation. You will need to repeat the above procedure to program the TV code.

PROGRAMMING THE TV CODE USING CODE SEARCH METHOD

To program a TV code by using the search or scan method:

SRC-300A	SRC-200
<ol style="list-style-type: none"> 1. Press the LED key and hold it down until the LED flashes rapidly. 2. Press the REC key. The LED stops blinking at this point and stays on solid. (Continue with step 3 below.) 	<ol style="list-style-type: none"> 1. Press the MUTE button and hold it down until the LED at the top of the remote control flashes rapidly. 2. (Continue with step 3 below.)
<ol style="list-style-type: none"> 3. Press and release the POWER key. The remote is now in TV code scan programming mode. 4. Press the up key to scan through all TV codes. ** When you reach the correct TV code, the TV will automatically turn on, or off if it was previously on. Note that the LED will flash rapidly once you have scanned through all the codes, and then it will continue to go through the codes again in a continuous wrap. 5. Press the SELECT button to store the TV code. The LED flashes rapidly, then stops, indicating that the TV code has been stored. 6. Repeat procedure for each remote control. 7. If you press the up key too rapidly, you may pass the TV code before the time the TV turns on or off. If you are not sure you are storing the correct TV code, press the down key slowly to cycle back through codes that have been previously scanned. 8. When the TV turns off, or on if it was previously off, press SELECT at that point to store the TV code. 	

VERIFYING THE TV CODES

To playback the TV code:

SRC-300A	SRC-200
<ol style="list-style-type: none">1. Press the LED key and hold it down until the LED flashes rapidly.2. Press the INFO key. The LED stops blinking at this point and stays on solid.3. Press and release the C key. The remote is now in playback mode.4. Observe the LED. The TV code will be indicated by a blink sequence for each number. See example below.	<ol style="list-style-type: none">1. Press the MUTE button and hold it down until the LED at the top of the remote control flashes rapidly.2. Press the FAV button. The remote is now in playback mode.3. Observe the LED. The TV code will be indicated by a blink sequence for each number. See example below.

For example, code 130 would show as the following:

<pause> <long blink> <off> (represents 1)
<pause> <long blink> <long blink> <long blink><off> (represents 3)
<pause> <short burst of flickering blinks> <off> (represents 0)


VERIFYING AND SETTING OTHER FEATURES

The TV Setup menu allows you read the TV RF settings, as well as set Secondary Audio, Display Language and the EADS display. These settings are accessed in the TV Setup Menu.

ACCESSING THE TV SETUP MENU


To access TV Setup Menu:

1. Press the MENU button on the front panel of the RG2400.
The Gateway Menu is displayed on your TV screen.

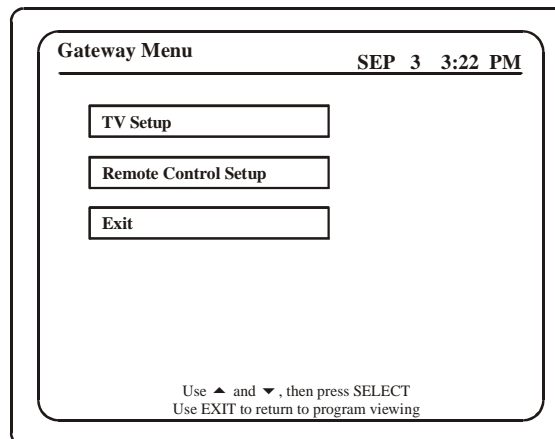

2. Use the down or up key on the RG2400 or the remote to highlight TV Setup.
3. Press the SELECT button on the RG2400 or the remote control.

The TV Setup menu is displayed on your TV screen.

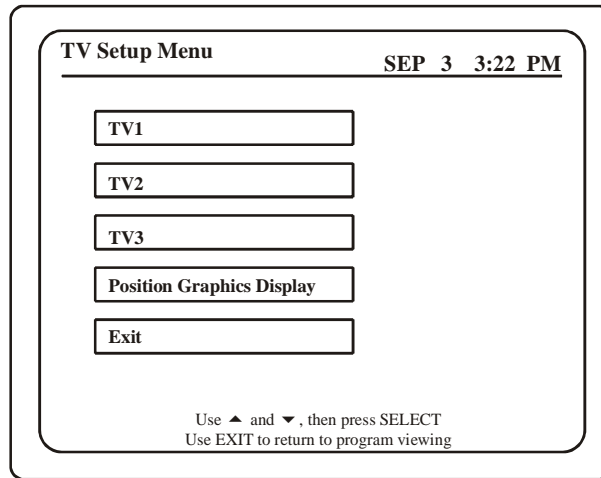


Note: The SELECT button on the remote control opens the Gateway menu only on the TV/Source that the remote control is programmed to operate. If you press SELECT and nothing happens, you need to determine which TV the remote operates. See “Determining the Remote Control ID” on page 24.

VERIFYING THE TV (RF) SETTING

1. Press MENU button on the RG2400 front panel. The Gateway Menu is displayed.
2. Use the down or up key on the RG2400 or the remote control to scroll to TV Setup.
3. Press SELECT. The TV Setup Menu will be displayed on your TV.
4. Use the down or up key on the remote control to highlight the TV you want to examine.
5. Press SELECT.

For example, if you selected TV1, the Setup 1 menu will be displayed. The selected RF setting is displayed, in this case channel 6 has been selected.

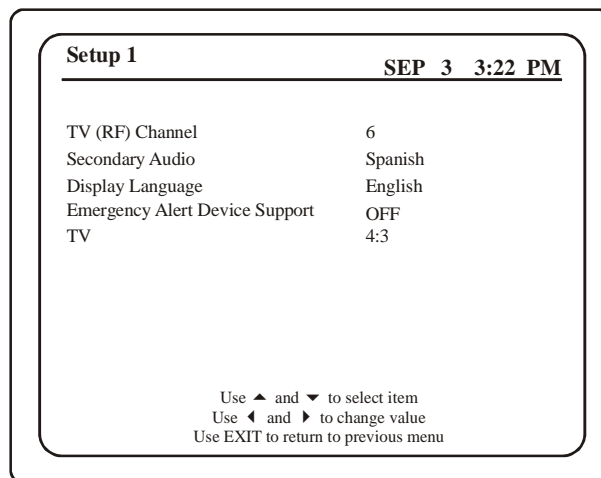

Note: Your Network Service Provider sets up the initial RF channel settings and your TV to provide program channels by programming the output to a specific RF channel. If you need to change the RF channel settings, it is recommended that you call your NSP to do this for you.

6. Press the EXIT button twice to exit back to the program screen.

SECONDARY AUDIO: SPECIFYING A PREFERRED LANGUAGE

Secondary audio allows you to select a preferred language for each TV.

Your NSP may deliver up to four audio programs with each video program. Your NSP may specify, for example, English as the first language, Spanish as the second, French as the third and Chinese as the fourth. If the preferred language is available, the alternate language audio track will be transmitted with the video program.

If a selected language is not provided on a particular channel, the RG2400 defaults to the primary language provided with the program. For example, if you are watching a Spanish-only channel, Spanish audio is played regardless of the Secondary Audio Display option.

1. Press the MENU button on the RG2400.
The Gateway Menu is displayed.
2. Use the up and down keys to highlight the TV Setup option.
3. Press SELECT.
The TV Setup menu is displayed.
4. Use the up and down keys to highlight the TV that you want to modify (TV1, 2 or 3).
5. Press SELECT.
The Setup TV# menu is displayed.
6. Use the up or down key on your RG2400 or remote control to highlight Secondary Audio.
7. Use the left and right keys to cycle through the alternate languages until the language you want is displayed.
8. Press the EXIT button twice to return to the program screen.

DISPLAY LANGUAGE

1. Press the MENU button on the RG2400.
The Gateway Menu is displayed.
2. Use the up and down keys to highlight the TV Setup option.
3. Press SELECT.
The TV Setup menu is displayed.
4. Use the up and down keys to highlight the TV that you want to modify (TV1, 2 or 3).
5. Press SELECT.
The Setup TV# menu is displayed.
6. Use the up or down key on your RG2400 or remote control to highlight Display Language.
7. Press the right key to highlight the default language, which was English in the previous examples.
8. Continue to press the right key in the language field until the language you want appears. Available languages are English, Spanish, French, and Norwegian.
9. When you have selected the preferred language, press EXIT to return to the Main Menu screen.

EADS (EMERGENCY ALERT DEVICE SUPPORT)

Your NSP enables the EADS (Emergency Alert Device Support) on each TV when service is established. If you would like to disable or change the EADS settings, use the following directions:

1. Press the MENU button on the RG2400.

The Gateway Menu is displayed.

2. Use the up and down keys to highlight the TV Setup option.
3. Press SELECT.

The TV Setup menu is displayed.

4. Use the up and down keys to highlight the TV/Source that you want to modify.
5. Press SELECT.

The Setup (TV#) menu appears on your TV screen.

6. Use the up and down keys to highlight Emergency Alert Device Support.
7. Press the right or left keys to enable/disable Emergency Alert Device Support.
8. Press EXIT to return to the previous menu.


If Emergency Alert Device Support is enabled, the following occurs for all EAS (Emergency Alert System) broadcasts:

- You hear a two-tone attention signal during Emergency Alert broadcasts.
- The RG2400 automatically tunes your TV to the channel that is broadcasting the EAS message.
- The emergency message appears at the top of your TV screen.



If EADS is not enabled, one of the following occurs, depending on the type of EAS broadcast:

- You hear a two-tone attention signal.

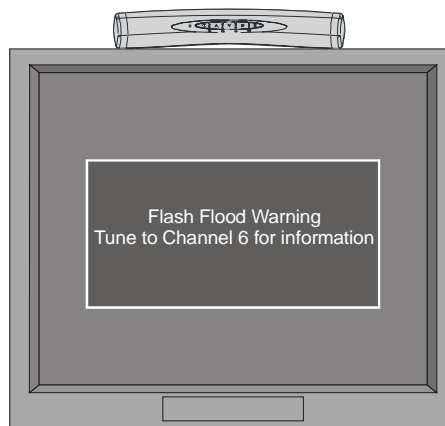

- A pop-up message appears on your TV screen to advise you of what type of emergency has occurred and the channel you should tune for more information.
- The RG2400 automatically tunes your TV to the channel that is broadcasting the EAS message.

For national and required monthly testing alerts, the RG2400 automatically tunes the TV to the EADS channel.


CONNECTING YOUR PC TO THE INTERNET

Important: Connecting your PC to the Internet and setting up the communications protocols on your PC should be done by your NSP. The following illustrations are for reference if you to move or replace your PC(s).

ETHERNET CONNECTIONS


Important: Although they appear identical, the CAT 5 cable that connects your RG2400 to your NSP (Network Service Provider) may be wired differently than the RJ-45 cable that connects your PC to the RG2400. Do not switch these two cables. If the cables are switched, the network connection to your RG2400 or your Ethernet connection to your PC may not operate. It is recommended that you label the two cables to avoid inadvertently switching them.

Single PC connected to the Internet through the RG2400

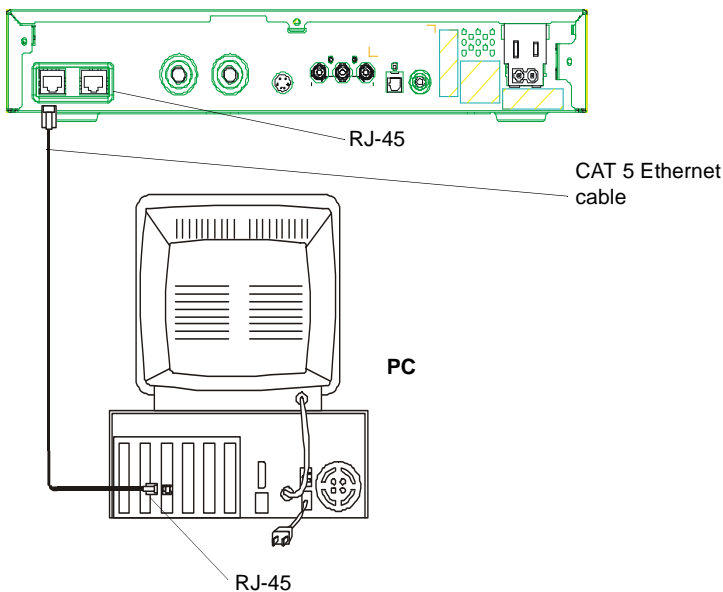

The RG2400 Ethernet output can connect to multiple PCs through the use of a hub. Whether all PCs connected in this manner can be provided with Internet access service depends on your NSP.

Multiple PCs connected to the Internet through the RG2400.

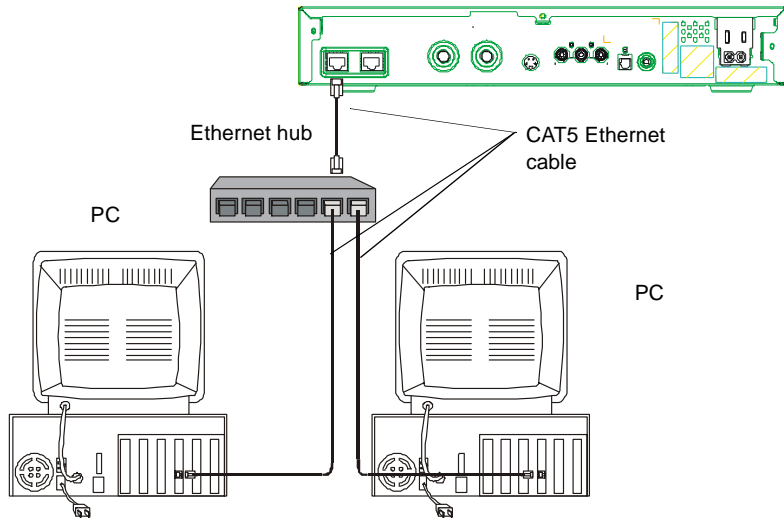

CONFIGURATION EXAMPLES

Your Network Service Provider installs the RG2400 and connects all your electronic devices to the RG2400. However, you may need the information in this section if you ever want to do any of the following:

- Move existing devices to a different location
- Add new devices to your system
- Reconfigure existing connections

Note: The RG2400 should be located in the area with your primary TV (TV1) and your home entertainment system.


When you rearrange your equipment, be sure to unplug and plug in your equipment in the following order:

1. Unplug all electronic devices, including the TV, VCR, and RG2400.
2. Disconnect all cables between your electronic devices.
3. Make your planned changes.
4. Reconnect the cables between these devices.

User Tip: When you are plugging your RG2400 in to a VCR that has more than one AV input, be sure to plug your RG2400 into the default, or primary input, which could be called AV-1 or L-1. Consult your VCR user's manual.

5. After you have connected the cables, first plug in the RG2400.


RG2400 back panel.

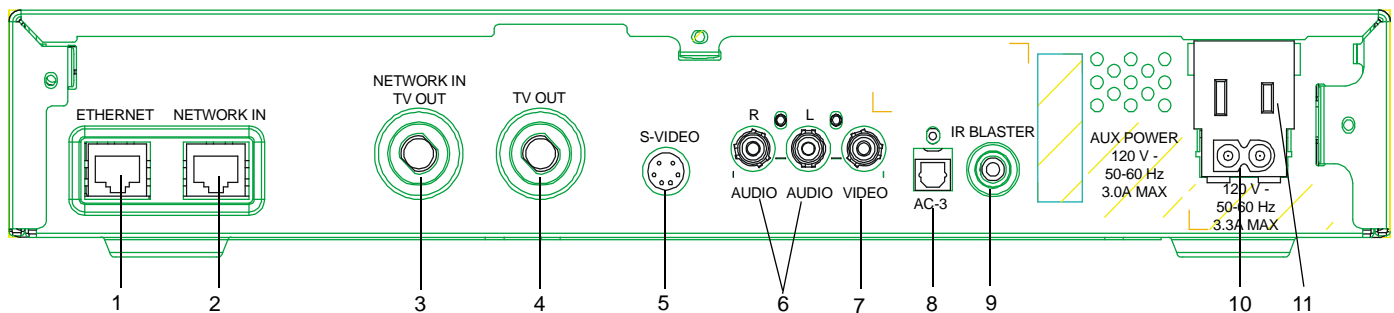


1. ETHERNET
2. NETWORK IN
3. NETWORK IN/TV OUT
4. TV OUT
5. S-VIDEO
6. AUDIO L and AUDIO R
7. VIDEO (composite)
8. DIGITAL AUDIO (Dolby Digital or AC-3 on S/PDIF connector)
9. IR BLASTER
10. AC Power
11. AC Outlet

TV/VCR/AUDIO CONNECTIONS


TV OUT (VHF) to TV1.

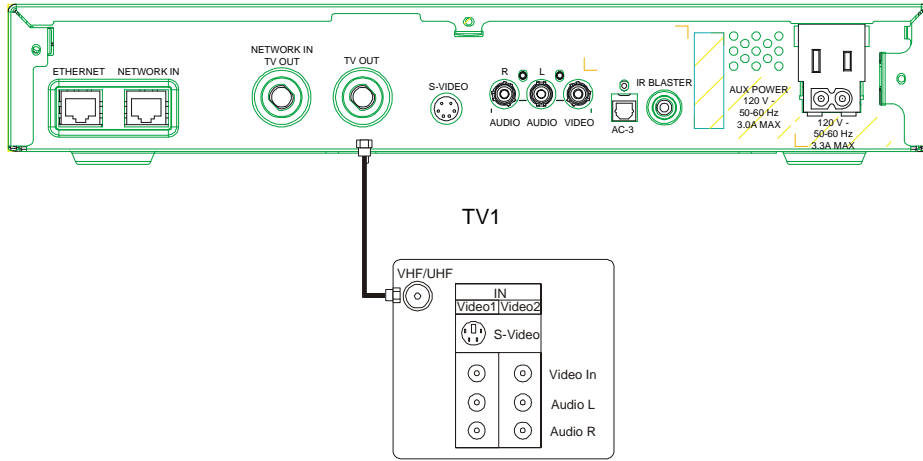


VIDEO (composite)/AUDIO-L/AUDIO-R to TV1.

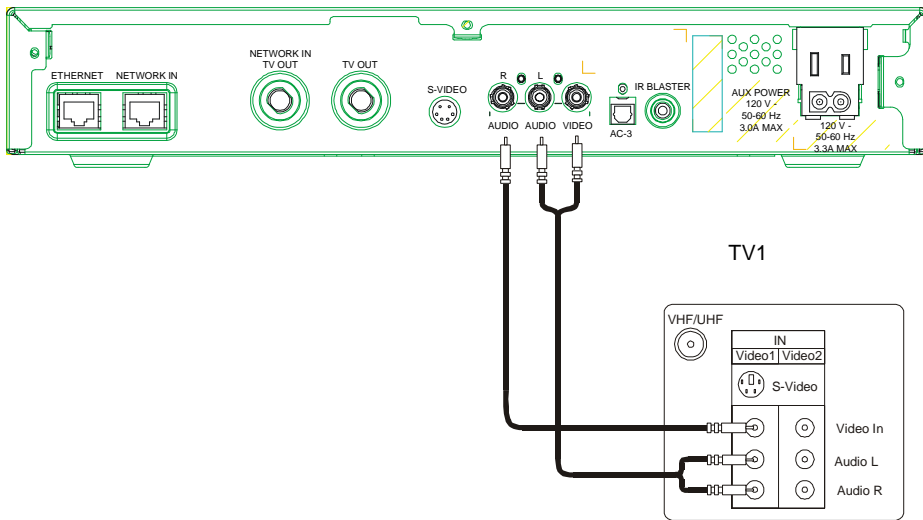


S-VIDEO/AUDIO-L/AUDIO-R to TV1.

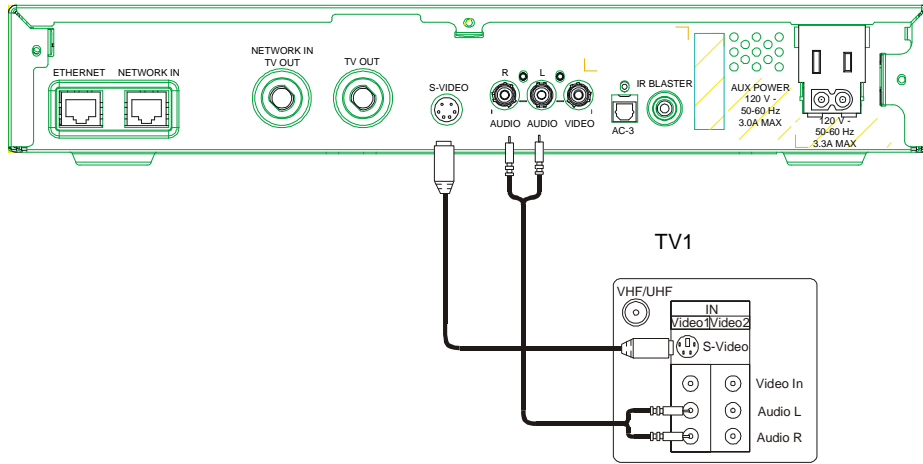


TV OUT (VHF) to VCR/TV1.

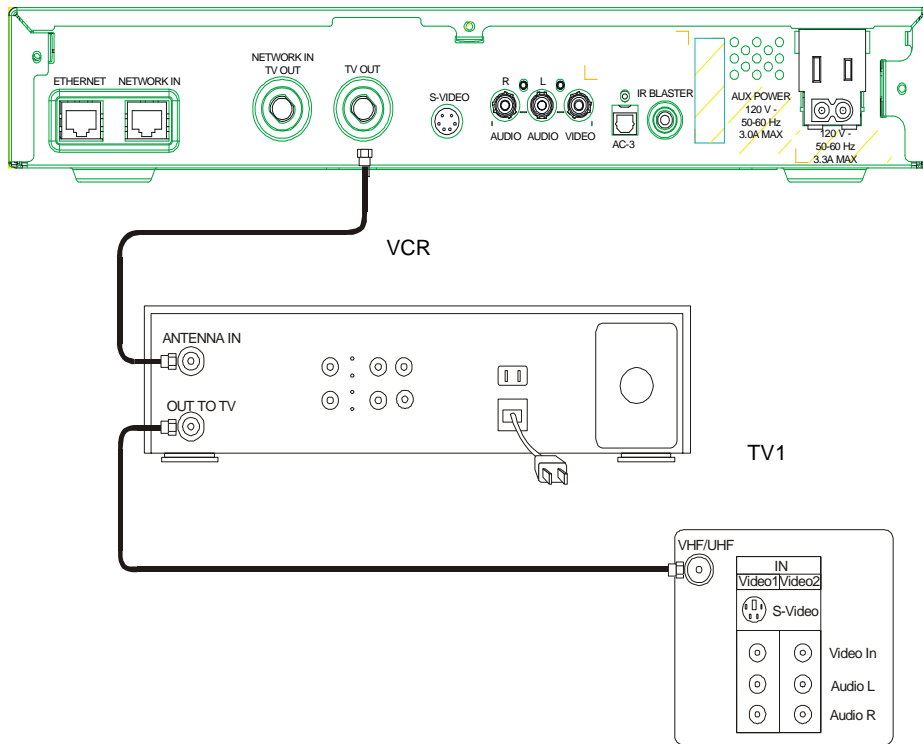


Composite VIDEO with AUDIO-L/AUDIO-R to VCR and TV1.

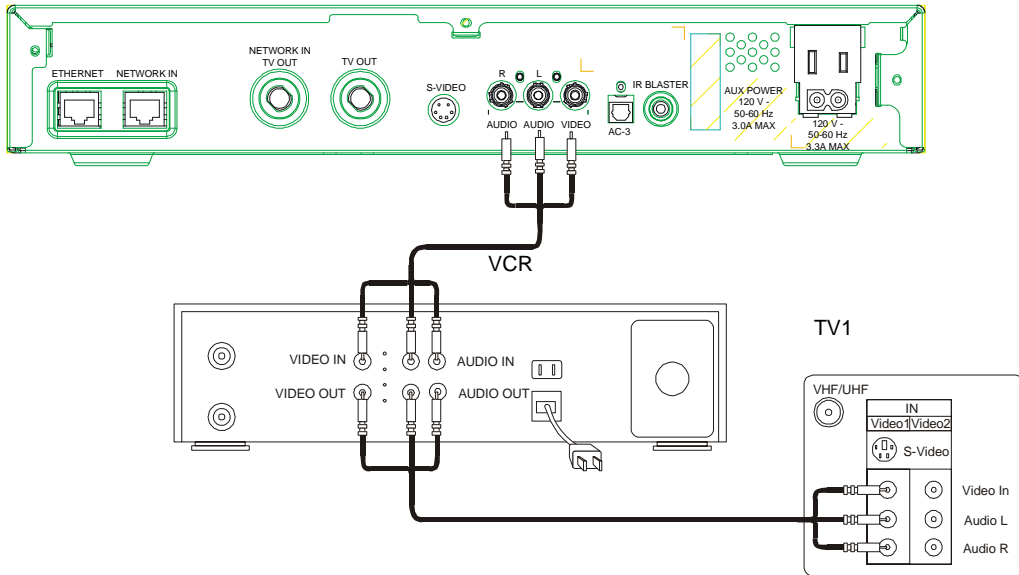


S-VIDEO and AUDIO-L/AUDIO-R to audio receiver and TV1.

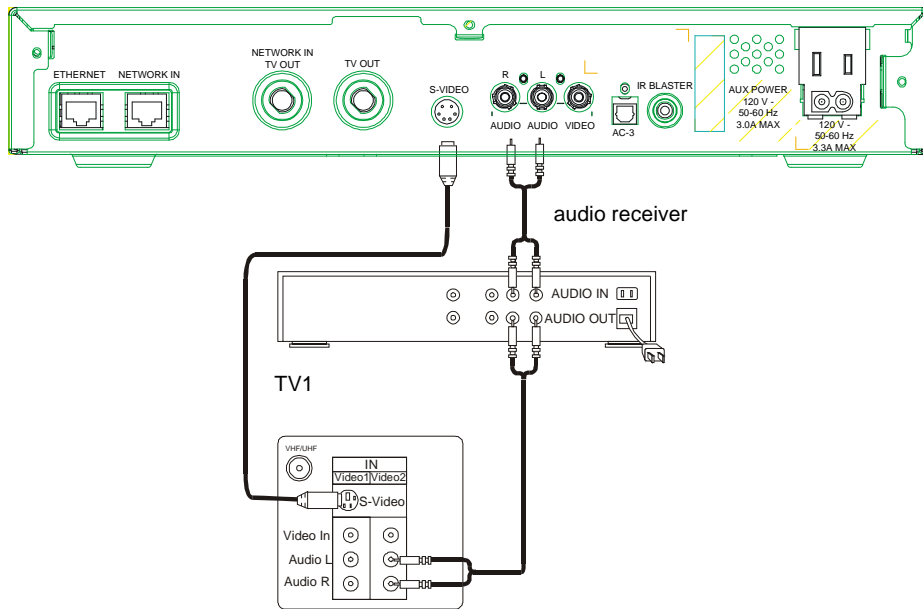


S-VIDEO/Digital Audio to audio receiver and TV1.

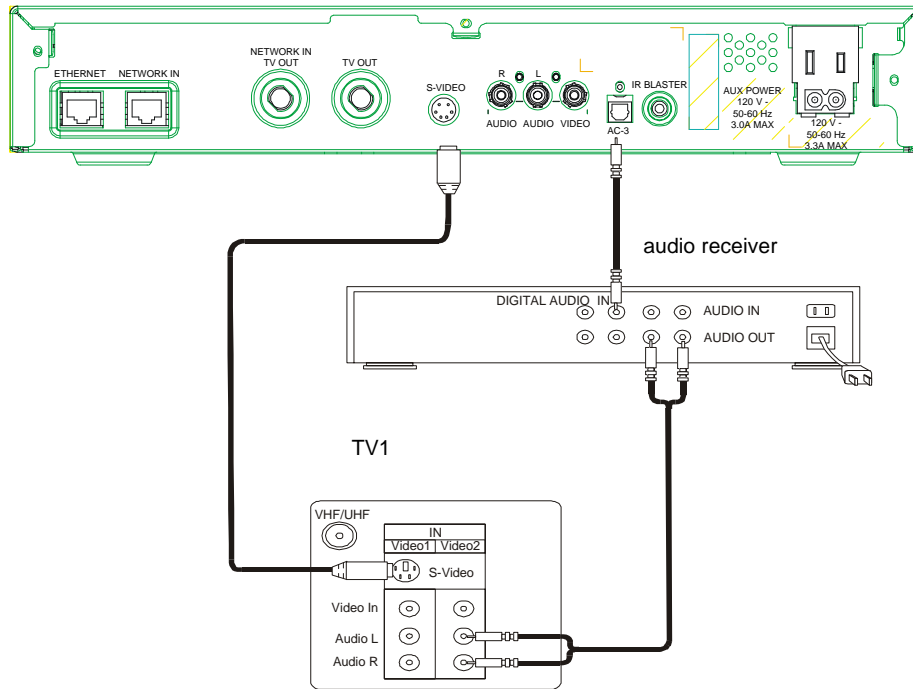


Basic home entertainment center.

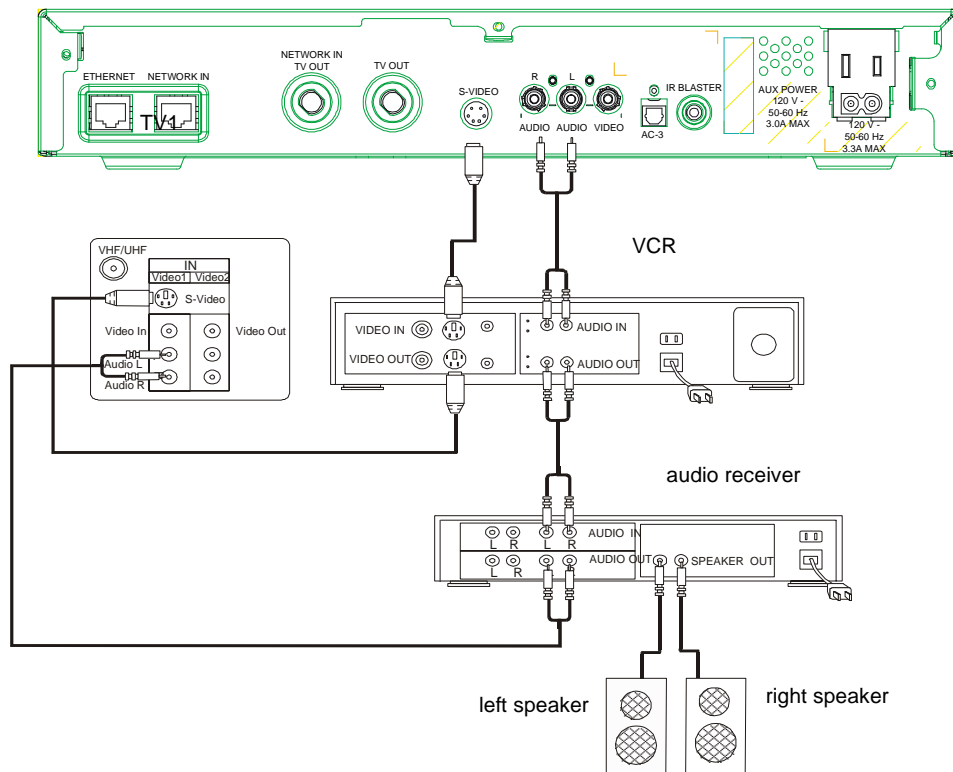

Advanced home entertainment center with Surround Sound (with Dolby Digital 5.1 capability).

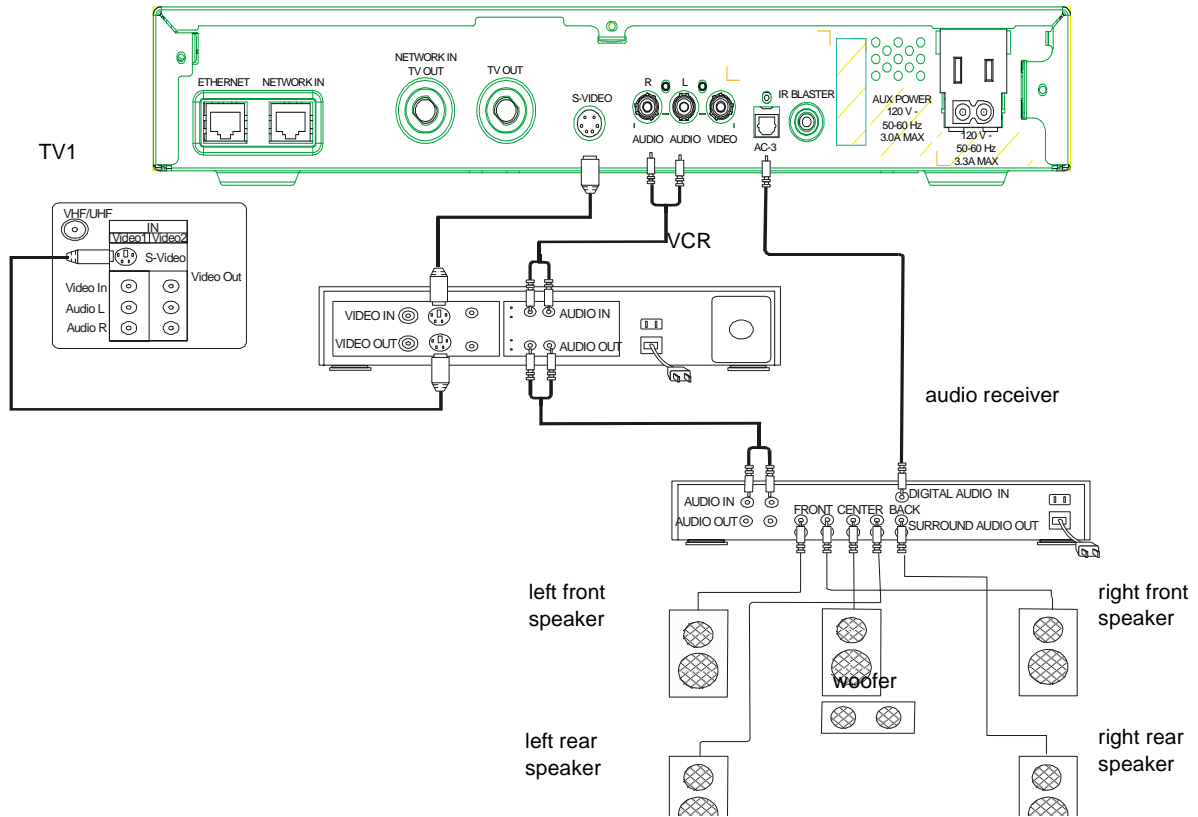

IR Blaster connection and positioning.

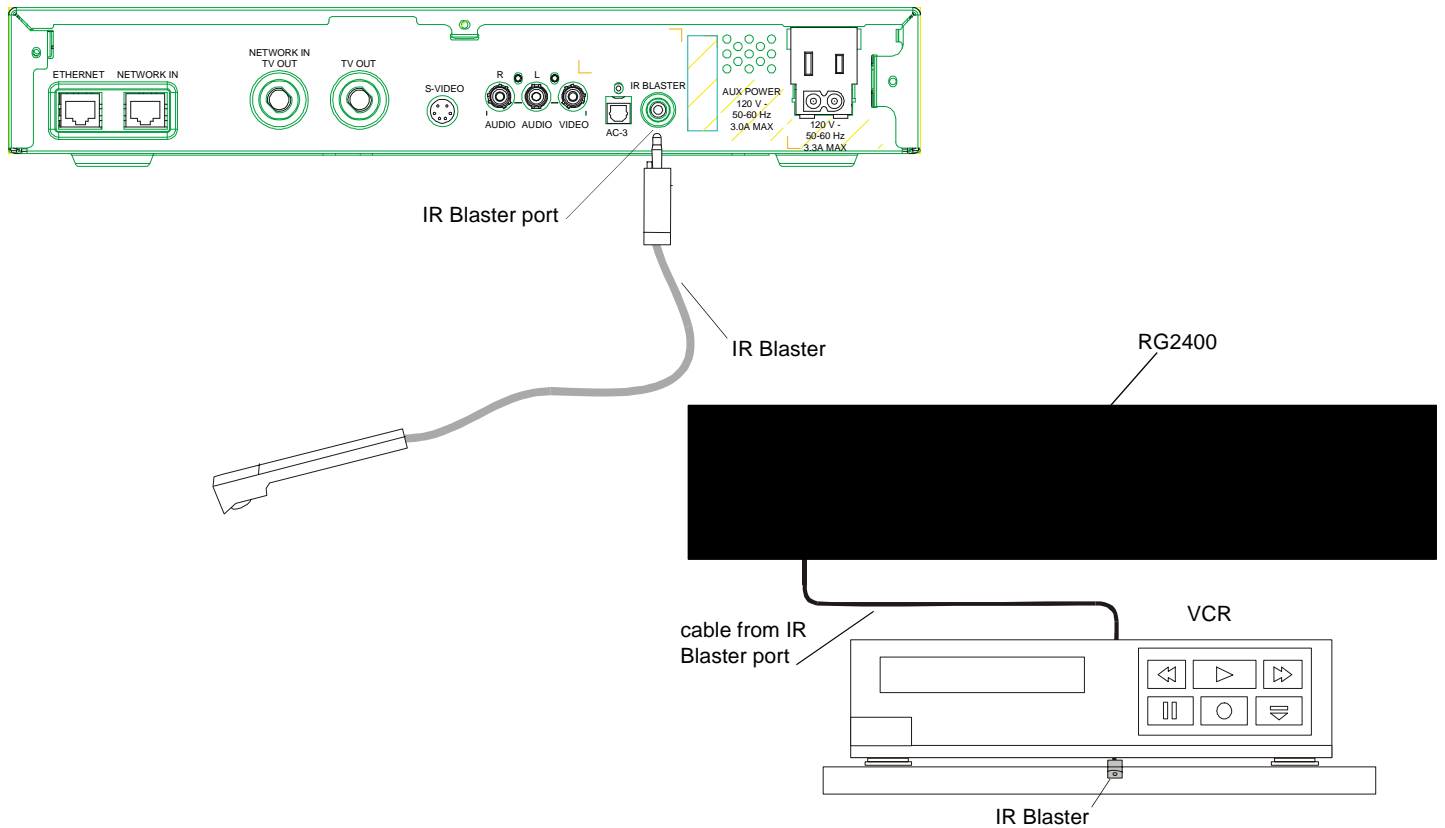

TROUBLESHOOTING

POSSIBLE CAUSES AND SOLUTIONS

This section describes what to do if your system is not working correctly. Study the following tables to find possible causes and solutions to the problem.

Problem	Possible Cause	Try This
Remote doesn't work	Dead batteries.	Change the batteries in your remote according to the instructions on page 13.
	Obstruction between the remote and the RG2400 or IR Transmitter.	Make sure that nothing is on or blocking a clear line of sight between the RG2400 and the remote.
Remote will not accept programming changes	Weak batteries.	Replace batteries and reprogram.
Remote will not operate at secondary viewing locations	Weak or dead batteries.	Replace batteries.
	Using wrong remote for that TV.	Check remote label to be sure you are using correct remote control.
	Obstruction between the remote and the TV.	Make sure that nothing is on or blocking a clear line of sight between the TV and the remote.
No sound	MUTE is pressed on the remote control.	Press MUTE on the remote to restore volume level.
	TV code not programmed.	Refer to "Programming the TV Code" on page 25.
No picture	TV or RG2400 may not be activated.	Refer to "Getting Started" on page 11.
	Cable signal may not be reaching your home.	Make sure all cables are connected properly and that your TV is tuned to the correct RF channel (for example 6,7, or 13) for the TV you are using (TV-1, TV-2, or TV-3). If the baseband video output on the RG2400 is connected to the VIDEO IN input on the TV, make sure the TV is set to the correct video input.
	VCR may be set incorrectly.	Check to see how the VCR is connected to the RG2400. If the baseband video output on the RG2400 is connected to the VCR, the VCR must be ON and programmed to VIDEO IN. Make sure VCR/TV is set to TV. Make sure the TV is set to the correct TV or video input.
No picture	Your RG2400 has recently received a software download. Sometimes after a download the system fails to operate. You may need to restart your RG2400.	To restart your RG2400, press and hold down the power button on the front panel for 5 seconds.
Picture is distorted	Coaxial cable is disconnected or loose.	Reconnect or tighten the cable.
Blue or black TV screen	No video supplied to TV.	If VCR is connected using RCA jacks, VCR must be ON to provide picture.
Snowy picture on all TVs	VCR is on at this location and TV is on wrong channel.	Call your NSP to reset your RF channel.
	TV is on wrong channel for Source.	Call your NSP to reset your RF channel.
Only one stereo speaker has sound	Audio connections are loose.	Reconnect audio connections. Check to make sure that no wires are frayed and no plugs are bent or broken.

Problem	Possible Cause	Try This
No power	Power cord is disconnected.	Check to make sure that the RG2400 is plugged into a live electrical outlet. Note: If the outlet is controlled by a wall switch, make sure the switch is on.
VCR will not record	VCR is on wrong channel.	See "Changing Channels" on page 15.
	VCR is programmed incorrectly.	Refer to the VCR User's Manual.
	VCR is not connected properly.	See "TV/VCR/Audio Connections" on page 34.
	VCR is connected with RCA jacks and is not in correct mode.	Place the VCR on the LINE input. This can be accomplished using the VCR menu or changing the VCR channel until the display on the VCR indicates LINE.
	Safety tab on tape is broken.	Use a new tape.
VCR will not play tapes	TV on wrong channel for playback or not using the correct input.	Tune TV to correct RF channel.
	VCR is not connected properly.	See "TV/VCR/Audio Connections" on page 34.
Amber On-line LED	You don't have on-line services.	Call your Network Service Provider to initiate service.
Amber Network LED	The Gateway is not ready for use.	Unplug power connection on back of Gateway then reconnect if light stays on more than 10 minutes.
Message on TV screen: "There is a problem with the network, Third video not available." Or, you are unable to make channel changes.	TV program temporarily not available.	Wait several seconds and try again. If you are still unable to make the channel change, turn off one of the other TV programs by shutting off the TV with the remote. The RG2400 detects that the TV program is no longer being watched. This should free up programming for the other TV and should allow you to receive video on the third TV.

CONTACTING YOUR NETWORK SERVICE PROVIDER FOR HELP

If you are unable to fix the problem yourself, contact your NSP for assistance. Depending on the problem you are having, your NSP may ask for your RG2400's model number. To find out what the model number is:

- Press the MENU button on the front panel of the RG2400. The GATEWAY menu appears.
- Select Remote Control Setup. The model number appears in the upper right-hand corner of the screen. For example, RG2BV30000.

Be sure that the remote control you are using came with your RG2400. Using more than one type of remote with the RG2400 does not work. Your NSP equips you with a set of remote controls that are all of the same type and model. For information about setting up and programming your system using the RG2400 remote control as well as setting up features such as Emergency Alert Services and Caller ID, see the second section of this manual, see ["Advanced Use" on page 21.](#)

TV AND VCR CODES

TV CODES - SRC 300

This section lists TV models that are compatible with the SRC-300A. If you do not find the TV code you need in the list, call your NSP.

TV and Codes
AOC: 005, 006, 019, 024, 032, 120, 140
Admiral: 003, 018, 041, 087, 125, 129, 187, 194, 210
Aiko: 024
Aiwa: 194, 251
Akai: 000, 005, 006, 032, 070, 072, 075, 107, 108, 120, 135, 139, 149
Alaron: 187
Amark: 032, 098, 120, 224
Amstrad: 033
Anam: 005, 009, 021, 032, 041, 120, 121, 183
Anam-National: 211
Archer: 032, 120
Audiovox: 024, 032, 041, 120, 130
Audio Dynamics: 238
BPL: 144
Bell & Howell: 018, 194
Broksonic: 005, 010, 027, 174, 176, 225, 226, 245
CXC: 041
Candle: 005, 006, 022, 025
Capehart: 019
Carver: 010, 027
Centurion: 005, 006, 194
Citizen: 005, 006, 010, 016, 018, 022, 024, 025, 027, 098, 202, 224
Concerto: 005, 010, 027
Contec: 017, 041, 054, 181, 185, 227
Corando: 098, 224
Coronado: 098, 224
Craig: 021, 041
Crown: 041, 098, 224
Curtis-Mathes: 005, 006, 010, 016, 018, 027, 059, 098, 125, 131, 194, 202, 210, 224, 231, 251

TV and Codes
Daewoo: 005, 010, 024, 027, 029, 030, 032, 098, 120, 130, 214, 215, 224, 247, 250, 252
Daytron: 006, 024, 098, 194, 224
DBX: 238
Denon: 052
Dimensia: 125
Dixi: 010, 027, 032, 120
Dumont: 001
Electrohome: 072, 098, 149, 224, 240
Emerson: 005, 017, 033, 035, 037, 038, 039, 041, 054, 098, 130, 132, 141, 143, 176, 181, 185, 187, 194, 203, 222, 223, 224, 225, 226, 227, 251, 252, 253
Envision: 006
Fisher: 042, 099, 194, 217
Fujitsu: 187
Funai: 024, 041, 132, 187, 251
Futuretech: 041
GE: 003, 005, 008, 009, 043, 087, 125, 130, 143, 147, 165, 182, 183, 206, 210, 211, 228, 231, 233, 248
Goldstar: 005, 006, 010, 027, 045, 098, 168, 194, 223, 224, 230, 238
Gradiente: 057, 060
Granada: 010, 027
Hallmark: 005
Harman Kardon: 238
Hinari: 010, 027, 187
Hitachi: 005, 017, 018, 024, 048, 049, 050, 051, 052, 053, 054, 055, 098, 116, 126, 142, 160, 185, 224, 231, 251
Infinity: 010, 027
JBL: 010, 027
JC Penney: 003, 005, 006, 014, 016, 043, 072, 087, 096, 098, 125, 131, 149, 165, 194, 202, 206, 210, 223, 224, 231, 238, 242
JVC: 057, 059, 060, 234, 235, 238
Jensen: 056
KEC: 041
KMC: 098, 224
KTV: 005, 006, 039, 041, 098, 224

TV and Codes
Kawasho: 061
Kenwood: 006, 235, 251
Kloss: 022, 110, 175
Konka: 236
LXI: 003, 005, 010, 027, 087, 125, 129, 131, 132, 194, 223, 251
Lloytron: 098, 224
Lodgenet: 018
Loewe: 010, 027
Logik: 018
Luxman: 005
MGA: 005, 006, 071, 072, 149, 187, 194, 240
MTC: 005, 006, 010, 016, 024, 027, 202, 251
Magnasonic: 010, 024, 027, 129, 131, 187
Magnavox: 000, 005, 006, 008, 010, 017, 024, 025, 027, 054, 067, 068, 098, 110, 132, 154, 167, 175, 187, 194, 216, 224, 231, 237, 251, 254
Majestic: 018
Marantz: 005, 006, 010, 027, 068, 072, 149, 237, 238
Marta: 223
Matsui: 010, 027, 032, 109, 120
Memorex: 005, 018, 032, 072, 120, 149, 187, 194, 219, 223, 242, 244, 248, 251
Midland: 001, 003, 087, 165
Mitsubishi: 005, 006, 017, 054, 070, 071, 072, 123, 129, 149, 187, 194, 239, 240
Multitech: 041, 251
NAD: 002, 005, 131, 166
NEC: 005, 006, 007, 183, 191, 194
National: 008, 010, 011, 012, 027, 146, 190, 211
Nikkai: 010, 027, 113, 131
Onwa: 041
Optimus: 012, 166, 194, 242
Optonica: 129
Orion: 010, 027, 037, 176, 212, 225, 226
Osume: 017, 054

TV and Codes
Panasonic: 008, 009, 010, 011, 012, 127, 148, 165, 177, 183, 211, 218, 231, 241, 242
Philco: 005, 006, 010, 024, 025, 027, 052, 067, 068, 072, 098, 110, 149, 175, 176, 183, 216, 224, 237, 251
Philips: 005, 006, 010, 025, 027, 068, 098, 136, 137, 138, 150, 220, 216, 223, 224, 237, 251
Pioneer: 002, 008, 048, 051, 076, 131, 166, 235
Portland: 005, 024, 098, 224
Proscan: 005, 125, 147, 152, 210, 233
Proton: 005, 006, 013, 019, 098, 224
Pulsar: 001, 024, 248
Quasar: 008, 009, 012, 165, 183, 211, 231, 242
RCA: 003, 005, 008, 014, 048, 063, 072, 078, 079, 080, 082, 084, 085, 086, 087, 125, 130, 147, 149, 160, 182, 183, 210, 231, 233, 251, 254
Radio Shack: 003, 005, 041, 072, 087, 098, 141, 149, 194, 224, 230, 242, 251
Realistic: 005, 006, 035, 041, 098, 141, 194, 222, 223, 224, 251
Runco: 001, 006, 243
SAA: 145
SSS: 005, 041
Saba: 051, 116, 142
Saisho: 032, 033, 109, 120
Sampo: 006, 019, 156, 194
Samsung: 005, 006, 010, 016, 027, 032, 098, 120, 155, 157, 167, 194, 202, 219, 221, 224, 229, 244, 246, 247
Sansui: 176, 225, 235, 251
Sanyo: 042, 089, 092, 109, 184, 194, 217, 219, 244
Scott: 005, 006, 037, 041, 093, 098, 187, 194, 224, 247
Sears: 003, 005, 010, 016, 027, 042, 087, 096, 098, 099, 101, 102, 104, 125, 131, 132, 184, 187, 194, 202, 217, 223, 224, 251
Sharp: 017, 054, 098, 129, 141, 200, 224, 254
Signature: 010, 018, 027, 251
Sony: 000, 109, 180, 189, 232
Soundesign: 005, 025, 041, 187, 251
Spectricon: 032, 120
Starlite: 041

TV and Codes
Supra: 005, 022
Sylvania: 005, 006, 010, 024, 025, 027, 068, 098, 110, 132, 175, 194, 224, 237, 240, 251
Symphonic: 132, 179, 251
TIVO: 136, 137, 138
TMK: 005
Tandy: 098, 113, 129, 224, 251
Tatung: 009, 010, 027, 183, 211
Teac: 251
Technics: 008, 012, 165, 242
Techwood: 005, 165
Teknika: 005, 010, 016, 018, 022, 024, 025, 027, 041, 072, 098, 114, 149, 187, 202, 223, 224, 251
Telerent: 018, 098, 224
Teletech: 032, 120
Thomson: 051, 116, 142
Toshiba: 016, 017, 054, 096, 131, 194, 202, 240, 245, 247
Totevision: 098, 223, 224
Universal: 043, 206
Vector Research: 006, 238
Victor: 057, 060, 235
Video Concepts: 070, 238, 251
Vidtech: 005
Viking: 022
Wards: 000, 005, 006, 010, 018, 027, 043, 067, 068, 125, 141, 182, 187, 194, 206, 224, 251
Westinghouse: 037, 041, 130, 176, 194
Yamaha: 005, 006, 238, 251
Yorx: 006, 194
Zenith: 001, 018, 024, 178, 223, 225, 235, 248, 249, 251
Zonda: 032, 120

TV CODES - SRC-200

This section lists TV models that are compatible with the SRC-200. If you do not find the TV code you need in the list, call your NSP.

TV and Codes
AOC: 005, 006, 019, 120, 140
Admiral: 018, 194, 210
Aiwa: 194, 251
Akai: 000, 005, 032, 070
Amark: 120, 224
Amstrad: 033
Anam: 005, 009, 021, 041, 120, 121
Anam-National: 211
Archer: 120
Audio Dynamics: 238
Audiovox: 120
Bell & Howell: 018
Broksonic: 005, 174, 225, 226
CXC: 041
Candle: 005, 006, 022, 025
Capehart: 019
Centurion: 194
Citizen: 005, 006, 016, 018, 022, 024, 025, 098, 202, 224
Concerto: 005
Contec: 017, 041, 185, 227
Corando: 224
Craig: 021, 041
Crown: 098
Curtis-Mathes: 005, 006, 016, 018, 059, 098, 125, 194, 202, 210, 224, 231
DBX: 238
Daewoo: 005, 024, 029, 030, 032, 098, 214, 215, 224, 247, 252
Daytron: 098, 194, 224
Dimensia: 125
Electrohome: 098, 224, 240
Emerson: 005, 017, 033, 035, 037, 038, 039, 041, 098, 143, 176, 185, 187, 203, 222, 223, 224, 225, 226, 227, 251
Fisher: 042, 194, 217
Fujitsu: 187
Funai: 041, 187, 251
Futuretech: 041

TV and Codes
GE: 003, 005, 008, 009, 043, 125, 130, 147, 206, 210, 211, 228, 231, 248
Goldstar: 005, 010, 045, 098, 194, 223, 224, 230, 238
Hallmark: 005
Harmon Kardon: 238
Hinari: 187
Hitachi: 005, 018, 048, 049, 050, 051, 052, 053, 054, 055, 098, 126, 185, 224, 231, 251
Infinity: 010
JBL: 010
JC Penney: 003, 005, 006, 014, 016, 043, 096, 098, 125, 194, 206, 210, 223, 224, 231, 238, 242
JVC: 057, 059, 060, 235, 238
Jensen: 056
KMC: 224
KTV: 005, 039, 041, 098, 224
Kawasho: 061
Kenwood: 006, 235, 251
Kloss: 022, 110
LXI: 003, 005, 010, 125, 129, 131, 194, 223, 251
Lloytron: 224
Lodgenet: 018
Logik: 018
Luxman: 005
MGA: 005, 006, 071, 072, 187, 194, 240
MTC: 005, 006, 016, 202
Magnavox: 000, 005, 006, 010, 017, 025, 027, 067, 068, 110, 154, 167, 175, 194, 224, 231, 237, 251, 255
Majestic: 018
Marantz: 005, 006, 010, 068, 237, 238
Marta: 223
Matsui: 032, 109
Memorex: 018, 032, 194, 223, 242, 244, 248, 251
Mitsubishi: 005, 017, 070, 071, 072, 123, 149, 187, 194, 239, 240
NAD: 002, 131
NEC: 005, 006, 007, 191, 194
National: 008, 010, 011, 012, 190, 211
Onwa: 041
Optimus: 242

TV and Codes
Optonica: 129
Orion: 225, 226
Osume: 017
Panasonic: 008, 009, 010, 011, 012, 177, 211, 231, 242
Philco: 005, 006, 010, 025, 067, 068, 110, 224, 237, 251
Philips: 005, 010, 025, 027, 068, 220, 223, 224, 237, 251
Pioneer: 002, 048, 051, 076, 235
Portland: 005, 098, 224
Proscan: 125, 147, 210
Proton: 005, 006, 013, 019, 098, 224
Pulsar: 001, 248
Quasar: 008, 009, 211, 231, 242
RCA: 003, 005, 014, 048, 078, 079, 080, 082, 084, 085, 086, 087, 125, 147, 210, 231, 251, 255
Radio Shack: 005, 041, 098, 141, 194, 224, 230, 242
Realistic: 041, 141, 194, 222, 223, 224, 251
Runco: 243
SAA: 145
SSS: 005, 041
Saba: 051
Saisho: 032, 033, 109
Sampo: 006, 019, 194
Samsung: 005, 006, 010, 016, 032, 098, 194, 202, 221, 224, 244, 246, 247
Sansui: 225, 235
Sanyo: 017, 042, 089, 092, 109, 194, 217, 244
Scott: 005, 037, 041, 093, 098, 187, 194, 224, 247
Sears: 003, 005, 042, 096, 098, 099, 101, 102, 104, 125, 131, 187, 194, 202, 217, 223, 224
Sharp: 017, 098, 129, 141, 200, 224, 255
Signature: 018, 251
Sony: 000, 017, 109, 180
Soundesign: 005, 025, 041, 251
Spectricon: 120
Supra: 005, 022
Sylvania: 005, 006, 010, 025, 068, 098, 110, 194, 224, 237, 240, 251

TV and Codes
Symphonic: 32, 251
TMK: 005
Tandy: 098, 113, 129, 251
Tatung: 009, 211
Teac: 251
Technics: 008, 242
Techwood: 005
Teknika: 005, 010, 016, 018, 022, 024, 025, 041, 072, 098, 114, 187, 202, 223, 224, 251
Telerent: 018, 224
Teletch: 032
Thomson: 051
Toshiba: 016, 017, 096, 131, 194, 202, 240, 247
Totevision: 098, 223, 224

TV and Codes
Universal: 043, 206
Vector Research: 006, 238
Victor: 057, 235
Video Concepts: 070, 238, 251
Vidtech: 005
Viking: 022
Wards: 000, 005, 006, 010, 018, 043, 067, 068, 125, 141, 187, 194, 206, 224, 251
Westinghouse: 194
Yamaha: 005, 006, 238, 251
Yorx: 194
Zenith: 001, 018, 223, 225, 235, 248, 249, 251
Zonda: 120

VCR CODES

This table lists the VCR models and code numbers that are compatible with the IR Transmitter. If you do not find the code you need in the list shown, call your NSP. Not all NSPs support use of the IR Blaster. These codes are exclusively for use with RG2400s equipped with an IR Transmitter.

VCR and Codes
Admiral: 048, 209
Adventura: 000
Aiko: 278
Aiwa: 307, 000, 037
Akai: 106, 053, 041, 061
America Action: 278
American High: 035
Asha: 240
Audiovox: 037
Beaemark: 240
Bell & Howell: 104
Broksonic: 121, 184, 002, 209, 211, 479
CCE: 072, 278
Calix: 037
Canon: 035
Capehart: 020

VCR and Codes
Carver: 081
Cineral: 278
Citizen: 278, 037
Colt: 072
Craig: 037, 072, 047, 240, 271
Curtis Mathes: 035, 041, 060, 162
Cybernex: 051, 240
Daewoo: 278, 561, 020, 045
Daytron: 020
Denon: 042
Dynatech: 000
Electrohome: 037
Electroponic: 037
Emerex: 032
Emerson: 184, 002, 209, 278, 036, 121, 211, 208, 479, 561, 061, 088, 212, 000, 037, 043, 068
Fisher: 047, 104, 054, 066
Fuji: 033, 035
Funai: 000
GE: 035, 060, 048, 202, 240
Garrard: 000
Go Video: 432, 526, 232
GoldStar: 037, 038
Gradiente: 008, 000

VCR and Codes
Grundig: 195
Harley Davidson: 000
Harman/Kardon: 038, 081
Harwood: 068, 072
Headquarter: 046
Hitachi: 042, 105, 000, 041
HI-Q: 047
Hughes Network Systems: 042
JVC: 067, 008, 041
Jensen: 041
KEC: 037, 278
KLH: 072
Kenwood: 041, 067, 038
Kodak: 035, 037
LXI: 037
Lloyd's 000, 208
Logik: 072
MEI: 035
MGA: 043, 061, 240
MGN Technology: 240
MTC: 000, 240
Magnasonic: 278
Magnavox: 035, 081, 000, 039, 149
Magnin: 240

VCR and Codes
Marantz: 081, 035
Marta: 037
Matsushita: 035, 162
Memorex: 104, 047, 000, 037, 048, 035, 046, 240, 307, 039, 209, 162
Minolta: 105, 042
Mitsubishi: 043, 173, 061, 048, 067
Motorola: 035, 048
Multitech: 000, 072
NAD: 058
NEC: 038, 040, 041, 067, 104
Nikko: 037
Nikon: 034
Noblex: 240
Olympus: 035
Optimus: 162, 048, 058, 037, 104, 432
Optonica: 062
Orion: 479, 002, 184, 209
Panasonic: 035, 162, 077, 225, 616
Penney: 035, 240, 037, 042, 038, 040, 054
Pentax: 042, 105
Philco: 035, 209, 479
Philips: 081, 035, 062
Pilot: 037
Pioneer: 058, 067
Portland: 020
Profitronic: 240
Proscan: 060, 202
Protec: 072
Pulsar: 039, 051
Quarter: 046
Quartz: 046
Quasar: 035, 162, 077
RCA: 060, 149, 202, 042, 105, 035, 048, 077, 106, 240
Radio Shack: 000
Radix: 037
Randex: 037
Realistic: 000, 104, 047, 048, 037, 035, 062, 046, 066
Ricoh: 034
Runco: 039
STS: 042
Samsung: 045, 051, 053, 240
Sanky: 039, 048
Sansui: 041, 479, 000, 067, 209, 271

VCR and Codes
Sanyo: 047, 046, 104, 240
Scott: 184, 211, 121, 043, 045, 210, 212
Sears: 054, 105, 037, 042, 000, 035, 046, 047, 066, 104
Semp: 045
Sharp: 048, 062
Shintom: 072
Shogun: 051, 240
Singer: 072
Sony: 033, 034, 032, 000, 035
Sylvania: 035, 081, 000, 043
Symphonic: 000
TMK: 036, 208, 240
Tatung: 041
Teac: 000, 041
Technics: 035, 162
Teknika: 000, 035, 037
Thomas: 000
Toshiba: 045, 210, 212, 043, 066, 366
Totevision: 037, 240
Unitech: 240
Vector: 045
Vector Research: 038, 040
Video Concepts: 040, 045, 061
Videosonic: 240
Wards: 035, 060, 062, 000, 047, 212, 240, 042, 048, 072, 081, 149
White Westinghouse: 278, 209
XR-1000: 072, 000, 035
Yamaha: 038
Zenith: 039, 000, 033, 034, 209, 479

Note: The IR Transmitter is not compatible with:

- Samsun VCR/TV model number CDX1342
- Philips VCR model number VRX364AT

SPECIFICATIONS

Cabling Requirements

Input/Output	Cable (connector)
NETWORK IN	CAT 5 (RJ-45)
DOLBY DIGITAL AUDIO(AC-3)	optical for AC-3
AUDIO L/R	shielded phono cable (RCA male)
VIDEO	shielded phono cable (RCA male)
S-VIDEO	S-video
NETWORK IN/TV OUT	coax (F male)
TV OUT	coax (F male)
ETHERNET	CAT 5 cable (RJ-45)
IR BLASTER	n/a (3.5 mm mini male)

Power Requirements

Condition	Power Consumption (watts)
normal operation	<30 watts, 105-125VAC 60Hz

Environmental

Temperature Range	Storage Range	Humidity Range (non-condensing)
0 to 40°C	-40°C to + 80°C	5% to 95%

Dimensions

Height	Width	Depth
2.75 in. (6.95cm)	14.75 in. (37.46cm)	10.125 in. (25.73cm)

CERTIFICATIONS

- GR-1089-CORE
- FCC Title 47 Part 15, Class B
- UL 1950
- UL and CSA 1950, and CE
- ASTM D (mechanical shock and vibration standards)

FCC STATEMENT OF COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTICE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the antenna.
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

INDEX

A

about this manual 7
Advanced Use 21

B

batteries
remote control 13
buttons
remote control 14, 15
RG2400 11
RG2400, front panel 11, 12

C

cable requirements 47
Certifications 47
changing channels 15
using the remote control 15
using the RG2400 buttons 15
channel list
select 16
channel order
favorite 16
setting up 16
closed captioning 9
codes
TV (SRC-200) 43–44
TV (SRC-300A) 41–42
VCR 44–45
Controlling TV Volume 15

D

dimensions 47
Display Language 29
changing 29
down key, about 12

E

Emergency Alert Device Support 29–30
entertainment center 38
advanced, illustrated 38
basic, illustrated 37
Ethernet connections 31
single PC 31

F

FCC statement of compliance 48
front panel
buttons 12

G

Gateway ID 24
determining 22–23
setting 21, 24, 26
Gateway Menu, illustrated 22, 27
Getting Started 11

I

IDs
Gateway, determining 22–23
Important Safeguards 5
Internet
connecting multiple PCs 32
Internet connections
PCs, multiple 31
Introduction 7
IR, about 13

L

language alternatives 29

M

message waiting 17
mute TV volume 16

N

Network Access Provider
finding 40
Network Service Provider
Services 8

P

Parental Control 18
parental locks 18
pay-per-view
using 18
plugging in devices 33
power requirements 47
preface 5

R

recording your favorite programs 19
remote control 13
buttons (SRC-200) 15
buttons (SRC-300A) 14
buttons, described 14, 15
using 13
remote control ID
setting 25
remote control ID form 9
Remote Control ID menu, illustrated 23
remote control ID, determining 24
Remote Control Setup menu, illustrated 23
replacing remote control batteries 13
RF channels, about 8
RF settings 28
RF settings, verifying 28
RG2400
using 11
RG2400 buttons, illustrated 11
RG2400 front panel
Channel Down key, about 12

- Channel Up key, about 12
- Clock Display, about 12
- Cursor buttons, about 11
- Guide button, about 12
- Info button, about 12
- Menu button, about 12
- Message LED, about 12
- On LED, about 12
- Power button, about 12
- Power LED, about 12
- Remote LED, about 12
- Select button, about 11

S

- Safety 6
 - advisories and labels 6
 - repairs 6
- secondary audio 29
- settings
 - changing 21
 - programming 21
- Setup Menu, illustrated 28
- Setup TV menu 27, 28
- Specifications 47
- SRC-200 remote control
 - TV codes, list 43–44
- SRC-300A remote control
 - TV codes, list 41–42
- Surround Sound, wiring illustrated 38

T

- temperature
 - operating range 47
- troubleshooting 39–40
 - blue or black screen 39
 - no picture 39
 - no power 40
 - no sound 39
 - picture distortion 39
 - remote control won't change channels 39
 - replacing remote control batteries 13

- snowy picture 39
- VCR will not play tapes 40
- VCR will not record 40
- TV codes 43
 - obtaining, using the code search method 26
 - programming 25
 - SRC-200, list 43–44
 - SRC-300A, list 41–42
- TV Setup Menu, illustrated 28
- TV volume
 - controlling 15
- TV/VCR/Audio Connections 34–38
- TVs
 - closed captioning 9
 - programming 27–28

U

- UHF, about 13
- unmute TV volume 16
- unplugging devices 33

V

- VCR codes 44–45
 - programming 20
- VCR, plugging into 33
- VCR, using the RG2400 to start 19
- video recording 19

W

- wiring
 - advanced home entertainment center with Surround Sound 38
 - basic home entertainment center 37
 - composite video with AUDIO-L/AUDIO-R and TV1 36
 - S-VIDEO and AUDIO-L/AUDIO-R to audio receiver and TV1 36
 - S-VIDEO/AUDIO-L/AUDIO-R to TV1 35
 - TV OUT to TV1 34
 - TV OUT to VCR/TV1 35
 - VIDEO/AUDIO-L/AUDIO-R to TV1 34